# PRINTED ON RECYCLED PAPER

This manual is printed by ISTECH, only used to show the relative information of this series. ISTECH keep the right of amending this manual due to technical improved or new production process used, or mistake amended, etc without notice. Please contact with our company to confirm the relative information when place the order.



# SHANGHAI ISTECH ELECTRIC CO., LTD.

Add: 777 Yuegong Road, Jinshan Industrial Zone, Shanghai, China

Tel: 0086-21-67290577 Fax: 0086-21-67290576

Email: sales@istech-electric.com Http://www.istech-electric.com





IST220 Series VFD For Solar Water Pumps IST210A Series Mini VFD User Manual

SHANGHAI ISTECH ELECTRIC CO.,LTD.

Thank you for choosing the IST210A & IST220 series inverter of multi-functions and high performance which made by Shanghai ISTECH Electric Co.,Ltd.

Incorrect handing might cause an unexpected fault. Before using the inverter, always read this instruction manual and the instruction manual packed with the product carefully to use the equipment to its optimum.

Do not attempt to install, operate, maintain or inspect the inverter until you have read through instruction manual and appended documents carefully and can use the equipment correctly. Do not use the inverter until you have a full knowledge of the equipment, safety information and instructions. In this instruction manual the safety instruction levels are classified into " Danger" and " Marning", please pay special attention to the symbols "Danger" and "Warning" and their relevant contents.

- " M Danger" Assumes that incorrect handing may cause hazardous conditions, resulting in death or severe injury.
- " A Warning" Assumes that incorrect handing may cause hazardous conditions, resulting in medium or slight injury, or may cause physical damage only.

The figures in this instruction manual are for convenience with description, they may have slight differences compared to the product, and the product update can also cause slight differences between the figure and product, the actual sizes are subject to actual products.

Please read carefully the operation manual before putting the inverter to use so as to correctly install and operate the inverter, give full play to its functions and ensure the safety. Please keep

the operation manual handy for future reference, maintenance, inspection and repair.

If you have any questions, please contact us or our agents in time, you will always receive our best attention.

# **Contents**

Chapter 1 Safety Cautions —	01
1–1 Confirmation on receiving	01
1–2 Transportion and installation	01
1–3 Wiring and Junction	02
1–4 Power–on, Test operation	03
1–5 Inspection and Maintenance	04
1–6 Emergency stop	
1–7 Disposing of the inverter	04
Chapter 2 Product Introduction —	05
2-1 Unpacking Confirmation	05
2–2 Inverter model description	05
2–3 Product Specifications	06
2–4 Product seriel models	07
2–5 Product storage	80
Chapter 3 Installation of the Inverter —	09
3–1 Installation environment and requirements	09
3–2 Inverter outline dimension drawings	11
Chapter 4 Wiring	12
4–1 Main Circuit Wiring	13
4–1–1 Peripheral Devices Description	13
4-1-2 Main Circuit Wiring Notice	13
4–1–3 Peripheral Devices Specifications	15
4-1-4 Specification of main circuit terminal	16
4-2 Control circuit terminal	
4–2–1 Basic wiring diagram	
4-2-2 Control terminals layout (0.4~3.7kW)	17
4–2–3 Control circuit terminals description	18
4–2–4 Wiring instructions	19
Chapter 5 Operation —	20
5–1 Opeation panel	20
5-1-1 Key Function description	21
5-1-2 Displays description	22
5–2 Operating panel operation instruction	22

# **Contents**

Chapter 6 IST220 Series Application For Solar Water Pump	25
6-1 Selection Table	25
6-2 Standard Function Parameters	26
6–3 Commissioning Guide	27
Chapter 7 Table of Function Parameters	29
Chapter 8 Detailed Explanations of Functional Parameters	41
8-1 Parameters for monitoring	41
8–2 Basic parameters	43
8-3 Parameters of basic applications	52
8-4 Parameters for input and output application	57
8–5 Secondary application group	70
8-6 Special operation (PLC Control)	78
8-7 Special operation (PID Control)	83
8-8 Initial settings and specifications of RS-485 communication	
8-9 Advanced application parameters	94
Chapter 9 Precautions for Maintenance and Inspection	<b></b> 97
9–1 Inspection	97
9-1-1 Daily inspection	97
9–1–2 Periodic inspection	97
9-1-3 Daily and periodic inspection	97
9-2 Replacement of parts	98
9-3 Trouble shooting	98
9-3 Check first when you have troubles	102
9-4 Inverter-generated noises and their reduction techniques	103
Chapter 10 Peripheral Devices Selection	104
10–1 Peripheral Devices Description	104
10–2 Applied Braking resistor Specification	104
Appendix 1 Simple Application Example	106

Safety Cautions User Manual

# **Chapter 1 Safety Cautions**

# 1-1 Confirmation on Receiving

# **A** Warning

The inverter has been strictly and well packed before ex-work.

Inconsideration of various factors during the transportation special attention should be paid to the following points before the assembly and installation. If there is anything abnormal please notify the dealer or the relevant people of our company.

- Check if the inverter has got any damage or deformation during the transportation and handling.
- Check if there is one piece of IST210A/IST220 series inverter and one copy of the instruction manual available when unpacking it.
- Check the information on the nameplate to see if the specifications meet your order (Operating voltage and KVA value).
- Check if there is something wrong with the inner parts, wiring and circuit board.
- Check if each terminal is tightly locked and if there is any foreign article inside the inverter.
- Check if the operator buttons are all right.
- Check if the optional components you ordered are contained.
- Check if there is a certificate of qualification and a warranty card.

# 1-2 Transportion and Installation

# **A** Warning

- When carrying products, use correct lifting gear to prevent injury.
- Do not stack the inverter boxes higher than the number recommended.
- Ensure that installation position and material can withstand the weight of the inverter. Install according to the information in the instruction manual.
- Do not install or operate the inverter if it is damaged or has parts missing.
- When carring the inverter, do not hold it by the front cover or setting dial. It may fall or fail.
- Do not stand or rest heavy objects on the product.
- Check the inverter mounting orientation is correct.
- Prevent other conductive bodies such as screws and metal fragments or other flammable substance such as oil from entering the inverter.
- As the inverter is a precision instrument, do not drop or subject it to impact.
- Use the inverter under the following environmental conditions.

Otherwise, the inverter may be damaged.

Ambient temperature:-10℃-40℃ <non-freezing>.

Ambient humidity: 95% RH or less <non-condensing>

Ambient environment: indoors <free from corrosive gas, flammable gas, oil mist, dust and dirt, free from direct sunlight>

Vibration: max. 0.5G

# 1-2 Transportion and Installation

# **A** Warning

- Please make sure that the screws are fixed, fastened firmly in accordance with the stipulations of the instruction manual, to prevent the inverter falling.
- If two or more inverters are installed in a control cabinet, please install them according to the information in the instruction manual, and it is required to keep enough space and install extra cooling fans to keep the air in the cabinet flowing freely to keep the temperature inside the cabinet lower than 40°C. Overheating may cause inverter fault, fire or other accidents.
- Due to the inverter of akind of electrical and electronic product it must be installed, tested and adjusted with parameters by specialized engineering persons of motors.

# 1-3 Wiring and Junction

# **A** Warning

- Please do not damage the wires. Let the wires bear weight or be clamped may damage the wires and cause an electric shock.
- Do not install a power factor correction capacitor or surge suppressor/radio noise filter (capacitor type filter)on the inverter output side.
- Do not install switch devices such as the air switch and contactor on the inverter output side, if it is for technologic demand, please ensure that the inverter is switching without output.
- Wrong wiring might lead to damage of the inverter. The control signal lines must be kept fully away from the main circuit to protect them from noise.

# **✓** Danger

- Please ensure that the power is off before junction.
- The wiring work shall be done by qualified electricians.
- Please wire the wires in accordance with the specifications stipulated in the instruction manual.
- The grounding connection shall be done correctly and in accordance with relative regulations in the instruction manual, otherwise it may cause an electric shock or fire.
- Please use independent power supply for the inverter, never use the same power supply with strong interference equipment like electric welder.
- Please do not touch the bottom plate with wet hand, otherwise you may get an electric shock.
- Please do not touch the terminals directly, do not connect the inverter's input or output terminals to the inverter's shell, otherwise you may get an electric shock.
- Please make sure that the voltage of the power supply and the voltage of the inverter are same, otherwise it may cause the inverter fault or personnel injury.
- The power supply cables must be connected to R,S,T. Never connect the power cable to the U,V,W of the inverter.Doing so will damage the inverter.

# 1-3 Wiring and Junction

# ✓ Danger

- Please do not conduct pressure resistance test to the inverter, otherwise it may cause the inverter's internal fault.
- Please install accessories such as brake units, brake resistors in accordance with the regulations of the instruction manual, otherwise it may cause the inverter fault or fire.
- Please ensure that the screws of the terminals are firmly locked otherwise it may cause the inverter fault.

# 1-4 Power-on, Test Operation

# **A** Warning

- While power is on or when the inverter is running, do not open the front cover. Otherwise you may get an
  electric shock.
- Do not run the inverter with the front cover or wiring cover removed. Otherwise, you may access the exposed high-voltage terminals or the charging part of the circuitry and get an electric shock.
- Before starting operation, confirm and adjust the parameters. A failure to do so may cause some machines to make unexpected motions.
- It is recommended to undertake test runs with no load.
- Please provide an emergency stop switch when the "stop" function setting is unavailable.
- Do not use the inverter input side magnetic contactor to start/stop the inverter, otherwise it may affect the life of the inverter.

# ✓ Danger

- When fault restart function is set, please do not approach the equipment because the equipment may automatically restart after the running stop.
- Make sure that the specification and rating match the system requirements. Exceeding their use range
  can cause motor and machine fault.
- Please do not change the parameter settings of inverter casually during running.
- While power is on or for some time after power-off, do not touch the inverter as it is hot and you may get burnt.
- Perform setting dial and key operations with dry hands to prevent an electric shock. Otherwise you may
  get an electric shock.
- Please do not link or withdraw motors during the inverter running, otherwise it may cause inverter protection or fault.

# 1-5 Inspection and Maintenance

# **A** Warning

- Please ensure that the power supply and the power indicating light is off before inspecting and maintaining. Otherwise you may get an electric shock.
- For prevent damage due to static electricity, touch nearby metal before touching this product to eliminate static electricity from your body.
- Do not carry out a megger (insulation resistance) test on the control circuit of the inverter.



- Any person who is involved in the wiring or inspection of this equipment should be fully competent to do the work.
- Please do check, maintenance and replacement of the components according to the appointed methods in the instruction manual, strictly prohibit modifying by yourself. If you do so, you may get an electric shock and injury or the inverter may get damaged.

# 1-6 Emergency Stop



- Provide a safty backup such as an emergency brake which will prevent the machine and equipment from hazardous conditions if the inverter fails.
- When the braker on the inverter input side trips, check for the wiring fault (short circuit), damage to internal parts of the inverter, etc. Identify the cause of the trip, then remove the cause and power on the
- When the protective function is activated, take the corresponding corrective action, then reset the inverter, and resume operation.

# 1-7 Disposing of the inverter

**A** Warning

Treat as industrial waste. Do not burn it up!

# **Chapter 2 Product Introduction**

# 2-1 Unpacking Confirmation

Product Introduction

In unpacking, please confirm the following:

- Check whether the model type of the inverter is in accordance with your order.
- Check whether the inverter is damaged and related accessories are included.


If you find an omission or disagreement, please contact the suppliers.

# 2-2 Inverter Model Description

# MODEL: IST210A-S15B

INPUT: 1PH 220V 50Hz/60Hz OUTPUT: 3PH 220V 7.0A 150% 60S FREQ RANGE: 0.1-400Hz 1.5kW 

1105080001-3051

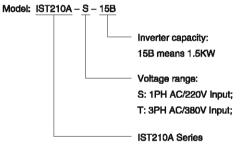

# MODEL: IST220S1.5G

INPUT: 1PH 220V 50Hz/60Hz OUTPUT: 3PH 220V 7.0A 150% 60S FREQ RANGE: 0.1-400Hz 1.5kW

1105080001-3051

Model: IST220 - S - 1.5G Inverter capacity: 1.5G means 1.5KW Voltage range: S: 1PH AC/220V Input; T: 3PH AC/380V Input; IST220 Series

# 2-3 Product Specifications

	Items	IST210A / IST220					
Power Supply	Rated voltage, Frequency	One-phase/Three-phase AC 220V 50/60Hz; Three-phase AC 380V 50/60Hz					
	Voltage Range	220V: 170V~240V; 380V: 330V~440V					
Outout	Voltage Range	220V: 0~220V; 380V: 0~380V					
Output	Frequency Range	0.10~400.00Hz					
Control method		V/F control, Space vector control.					
Indication		Operating status / Alarm definition / interactive guidance: eg, frequency setting, the output frequency/current, DC bus voltage, the temperature and so on.					
	Output Frequency Range	0.10Hz~400.00Hz					
	Frequency Setting Resolution	Digital input: 0.01 Hz, analog input: 0.1% of maximum output frequency					
	Output Frequency Accuracy	0.01 Hz					
	V/F Control	Setting V/F curve to satisfy various load requirements.					
	Torque Control	Auto increase: auto raise torque by loading condition; Manual increase: enable to set 0.0~20.0% of raising torque					
Control Specifications	Multifunctional Input Terminal	Six multi-function input terminals, realizing functions including fifteen section speed control, program running, four-section acceleration/deceleration speed switch, UP/DOWN function and emergency stop and other functions					
	Multifunctional Output Terminal	2 multi-function output terminals for displaying of running zerospeed, counter, external abnormity, program operati and other information and warnings.					
	Acceleration / deceleration Time Setting	0-999.9s acceleration/deceleration time can be set individually.					
	PID Control	Built-in PID control					
	RS485	Standard RS485 communication function (MODBUS)					
Other Functions	Frequency Setting	Analog input: 0 to 10V, 0 to 20mA can be selected; Digital input: Input using the setting dial of the operation panel or RS485or UP/DOWN.					
	Multi-speed	Six multifunction input terminals, 15 section speed can be set					
	Automatic voltage regulation	Automatic voltage regulation function can be selected					
	Counter	Built-in 2 group of counters					

	Items	IST210A / IST220			
	Overload	150%, 60second (Constant torque)			
Protection / Warning Function	Over Voltage	Over voltage protection can be set.			
	Under Voltage	Under voltage protection can be set.			
	Other Protections	Overheat ,output shortcircuit, over current, and parameter lock and so on.			
	Ambient Temperature	-10℃ to 40℃ (non-freezing)			
<b>-</b>	Ambient Humidity	Max. 95% (non-condensing)			
Environment	Altitude	Lower than 1000m			
	Vibration	Max. 0.5G			
0	Cooling Mode	Forced air cooling			
Structure	Protective Structure	IP 20			
Installation	Mode	Wall Mounted			

# 2-4 Product Seriel Models

Product Introduction

Model	Output power (kW)	Capacity (KVA)	Output Current (A)	Overload capacity (60s) A	Adaptable Motor (kW)	
1PH 220V 50/60Hz						
IST210A-S04B	0.4	1	2.5	3.75	0.4	
IST210A-S07B	0.75	2	5	7.5	0.75	
IST210A-S15B	1.5	2.8	7	10.5	1.5	
IST220S0.4G	0.4	1	2.5	3.75	0.4	
IST220S0.7G 0.75		2	5	7.5	0.75	
IST220S1.5G	1.5	2.8	7	10.5	1.5	
IST220S2.2G	2.2	4.5	11	16.5	2.2	
IST220S3.7G	3.7	7.2 16.5		24.75	3.7	
3PH 380V 50/60Hz						
IST210A-T07B	0.75	2.2	2.7	4.05	0.75	
IST210A-T15B	1.5	3.2	4	6	1.5	
IST210A-T22B	2.2	4	5	7.5	2.2	
IST220T0.2G	0.2	1	0.8	1.2	0.2	
IST220T0.4G	0.4	2	1.5	2.25	0.4	
IST220T0.7G	0.75	2.2	2.7	4.05	0.75	
IST220T1.5G	1.5	3.2	4	6	1.5	

# 2-3 Product Specifications

	Items	IST210A / IST220				
Power Supply	Rated voltage, Frequency	One-phase/Three-phase AC 220V 50/60Hz; Three-phase AC 380V 50/60Hz				
	Voltage Range	220V: 170V~240V; 380V: 330V~440V				
0	Voltage Range	220V: 0~220V; 380V: 0~380V				
Output	Frequency Range	0.10~400.00Hz				
Control method		V/F control, Space vector control.				
Indication		Operating status / Alarm definition / interactive guidance: eg, frequency setting, the output frequency/current, DC bus voltage, the temperature and so on.				
	Output Frequency Range	0.10Hz~400.00Hz				
	Frequency Setting Resolution	Digital input: 0.01 Hz, analog input: 0.1% of maximum output frequency				
	Output Frequency Accuracy	0.01 Hz				
	V/F Control	Setting V/F curve to satisfy various load requirements.				
	Torque Control	Auto increase: auto raise torque by loading condition; Manual increase: enable to set 0.0~20.0% of raising torque				
Control Specifications	Multifunctional Input Terminal	Six multi-function input terminals, realizing functions including fifteen section speed control, program running, four-section acceleration/deceleration speed switch, UP/DOWN function and emergency stop and other functions				
	Multifunctional Output Terminal	2 multi-function output terminals for displaying of running zerospeed, counter, external abnormity, program operati and other information and warnings.				
	Acceleration / deceleration Time Setting	0-999.9s acceleration/deceleration time can be set individually.				
	PID Control	Built-in PID control				
	RS485	Standard RS485 communication function (MODBUS)				
Other Functions	Frequency Setting	Analog input: 0 to 10V, 0 to 20mA can be selected; Digital input: Input using the setting dial of the operation panel or RS485or UP/DOWN.				
	Multi-speed	Six multifunction input terminals, 15 section speed can be set				
	Automatic voltage regulation	Automatic voltage regulation function can be selected				
	Counter	Built-in 2 group of counters				

	Items	IST210A / IST220		
	Overload	150%, 60second (Constant torque)		
Protection / Warning Function	Over Voltage	Over voltage protection can be set.		
	Under Voltage	Under voltage protection can be set.		
	Other Protections	Overheat ,output shortcircuit, over current, and parameter lock and so on.		
	Ambient Temperature	-10℃ to 40℃ (non-freezing)		
Environment	Ambient Humidity	Max. 95% (non-condensing)		
Environment	Altitude	Lower than 1000m		
	Vibration	Max. 0.5G		
Structure	Cooling Mode	Forced air cooling		
Structure	Protective Structure	IP 20		
Installation	Mode	Wall Mounted		

# 2-4 Product Seriel Models

Product Introduction

Model	Output power (kW)	Capacity (KVA)	Output Current (A)	Overload capacity (60s) A	Adaptable Motor (kW)
1PH 220V 50/60Hz					
IST210A-S04B	0.4	1	2.5	3.75	0.4
IST210A-S07B	0.75	2	5	7.5	0.75
IST210A-S15B	1.5	2.8	7	10.5	1.5
IST220S0.4G 0.4		1	2.5	3.75	0.4
IST220S0.7G 0.75		2	5	7.5	0.75
IST220S1.5G	1.5	2.8	7 10.5		1.5
IST220S2.2G	2.2	4.5	11 16.5		2.2
IST220S3.7G	3.7	7.2	16.5	24.75	3.7
3PH 380V 50/60Hz					
IST210A-T07B	0.75	2.2	2.7	4.05	0.75
IST210A-T15B	1.5	3.2	4	6	1.5
IST210A-T22B	2.2	4	5	7.5	2.2
IST220T0.2G	0.2	1	0.8	1.2	0.2
IST220T0.4G	0.4	2	1.5	2.25	0.4
IST220T0.7G	0.75	2.2	2.7	4.05	0.75
IST220T1.5G	1.5	3.2	4	6	1.5

# 2-4 Product Seriel Models

Model	Output power (kW)	Capacity (KVA)	Output Current (A)	Overload capacity (60s) A	Adaptable Motor (kW)	
3PH 380V 50/60Hz						
IST220T2.2G	2.2	4	5	7.5	2.2	
IST220T3.7G/5.5P	3.7/5.5	6.8	8.6/12.5	12.9/15	3.7/5.5	
IST220T5.5G 5.5		10	12.5	18.75	5.5	
ST220T7.5P 7.5		10	17.5	21	7.5	
IST220T7.5G/11P	T220T7.5G/11P 7.5/11		17.5/24 26.5/28.8		7.5/11	
IST220T11G/15P	11.0/15.0	19	24/33	36/39.6	11.0/15.0	
IST220T15G/18.5P	15/18.5	26	33/40	49.5/48	15/18.5	
IST220T18.5G/22P 18.5/22		32	40/47	60/56.4	18.5/22	
IST220T22G/30P 22/30		37	47/65	70.5/78	22/30	
IST220T30G/37P 30/37		52	60/75	90/90	30/37	
IST220T37G	37	64	75	112.5	37	

# 2-5 Product Storage

The inverter must be put in the packaging box before installation. If the inverter is not used for the moment, during the storage, please pay attention those as below:

- 1. The products must be placed in the location with dry and without dust and dirt.
- 2. The relative humidity of the environment is within 0-95%, and without condensing.
- 3. The storage temperature of the environment must be within the range of −26°C to +65°C.
- There are no corrosive gas and liquids in the storage environment, and the product is away from direct sunlight.

It is better not to store the inverter for long time. Long time storage of the inverter will lead to the deterioration of electrolytic capacity.

If it needs to be stored for a long time make sure to power it up one time within a year and the power-up time should be at least above five hours. When powered up the voltage must be increased slowly with a voltage regulator to the rated voltage value.

# Chapter 3 Installation of the Inverter

# 3-1 Installation Environment and Requirements

Environment of installation has direct effect on the inverter's life. If the inverter is used in the environment that does not accord with the allowed range of the operation instruction, and may lead to the inverter protection or fault.


About the inverter's installation environment, please ensure it is in accordance with the following condition:


- (1) Environment temperature from-10°C to +40°C
- (2) Environment humidity 0-95% without condensing
- (3) Away from direct sunlight

Installation of the Inverter

- (4) The environment does not contain corrosive gas and liquid
- (5) The environment does not contain dust, floating fiber and metal dust.
- (6) Far away from radioactive materials and combustible substances
- (7) Far away from electromagnetic interference sources (as welder, high-powered machines)
- (8) The installation surface shall be firm. Without vibration, the vibration cannot be avoided, please add anti-vibration spacer to reduce vibration.
- (9) Please install the inverter to a location where it is good for ventilation, inspection and maintenance, and away from heating unit (as brake resistor).
- (10) Preserved enough space for inverter installation, especially for multiple inverters installation, please pay attention to the laying position of the inverter, and install an extra cooling fan to keep the environment temperature lower than 45℃.

# 1 Single inverter installation

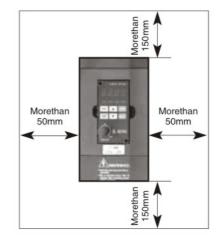

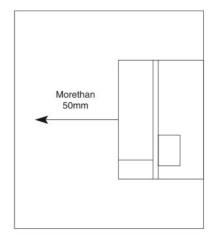

# **Chapter 4 Wiring**

The wiring of the inverter can be divided into main circuit and control circuit.




AC power supply. Please adopt three-phase AC power supply in accordance allowed regulation of the inverter.

Air switch: Non-fuse circuit breaker (MCCB) or residual current circuit breaker. The input power supply has large impulse current when supplying the inverter, so please pay attention to the selection of the breaker.

Contactor. Please use electromagnetic contractor (MC), note: please do not use electromagnetic contator to start or stop the inverter, otherwise it may reduce the inverter's service life

AC current reactor. Optional, in order to suppress high harmonic and improve efficiency, please choose a proper reactor.

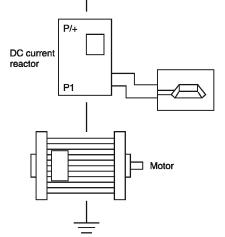

Ground

Brake resistor. It can improve the braking ability of the internal brake unit of the inverter.

# 4-1 Main Circuit Wiring

Wiring

### 4-1-1 Peripheral Devices Description

(1) AC power supply

Use within the permissible power supply specifications of the inverter.

(2) Moulded case circuit breaker: (MCCB)

When the power supply voltage is low or the input terminal short circuit occurs, the breaker can provide protection, during inspection, maintenance or the inverter is not running, you can cut off the breaker to separate the inverter from the power supply.

(3) Magnetic contractor(MC)

The contractor can turn on and turn off the power of the inverter to ensure safety.

(4) AC current reactor

a: Suppress high harmonic to protect the inverter.

b: Improve the power efficiency.


(5) Brake resistor

When the motor is braking, the resistor can avoid DC bus high voltage of the inverter, and improve the braking ability of the internal brake unit.

15KW or less the brake unit is built-in, please confirm it.

To select the brake resistor, please refer to section 4, chapter 9:

Appiled Braking resistor specification.

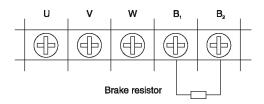

### 4-1-2 Main Circuit Wiring Notice

The IST210A/IST220 series is a highly reliable product, but incorrect peripheral circuit making or operation/handing method may shorten the product life or damage the product.

Before starting operation, always recheck the following items.


- (1) Use crimping terminals with insulation sleeve to wire the power supply and motor.
- (2) Application of supply power to the output terminals (U,V,W) of the inverter will damage the inverter. Never perform such wiring.
- (3) After wiring, wire offcuts must not be left in the inverter.

Wire offcuts can cause an alarm failure or malfunction. Always keep the inverter clean .When drilling mounting holes in an enclosure etc., take are not to allow chips and other foreign matter to enter the inverter.

- (4) This inverter must be earthed. Earthing must conform to the requirements of national and local safety regulations and electrical codes.
- (5) Use the thickest possible earth cable.
- (6) The grounding point should be as near as possible to the inverter, and the ground wire length should be as short as possible.

Wiring


(7) Where possible, use independent earthing for the inverter. If independent earthing is impossible, use joint earthing (I, II)where the inverter is connected with the other equipment at an earthing point. Joint earthing as in (III) must be avoided as inverter is connected with the other equipment by a common earth cable.

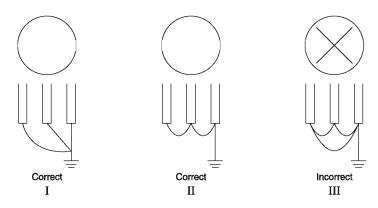

- (8) To prevent a malfunction due to noise, keep the signal cables more than 10 cm away from the power cables.
- (9) The overall wiring length should be 100 m maximum.

Especially for long distance wiring, the fast-response current limit function may be reduced or the equipment connected to the inverter output side may malfunction or become faulty under the influence of a charging current due to the stray capacity of the wiring, therefore, note the overall wiring length.

(10) Do not install a power factor correction capacitor, surge suppressor or radio noise filter on the inverter output side.

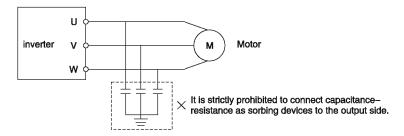

- (11) Before starting wiring or other work after the inverter is operated, wait for at least 10 minutes after the power supply has been switched off, and check that there are no residual voltage using a tester or the like. The capacitor is charged with high voltage for some time after power off and it is dangerous.
- (12) Electromagnetic wave interference

The input/output (main circuit) of inverter includes high frequency components, which may interfere with the communication devices (such as AM radios) used near the inverter. In this case, set the EMC filter valid to minimize interference.

(13) Across P/+ and PR terminals, connect only an external regenerative brake discharge resistor. Do not connect a mechanical brake.

# 4-1-3 Peripheral Devices Specifications

Check the motor capacity of the inverter you purchased.

Appropriate peripheral devices must be selected according to the capacity. Refer to the following list and prepare appropriate peripheral devices:


Applicable Inverter Type	Input voltage	Motor Output (kW)	Main Circuit Cable Type (mm²)	Breaker Selection (A)	Input Side Magnetic contracto (A)
IST210A-S04B		0.4	2.5	16	10
IST210A-S07B		0.75	2.5	16	10
IST210A-S15B	-	1.5	4	20	16
IST220S0.4G		0.4	2.5	16	10
IST220S0.7G	1PH 220V 50/60Hz	0.75	2.5	16	10
IST220S1.5G		1.5	4	20	16
IST220S2.2G	•	2.2	6	32	20
IST220S3.7G		3.7	6	40	25
IST210A-T07B		0.75	2.5	16	10
IST210A-T15B		1.5	2.5	16	10
IST210A-T22B		2.2	2.5	16	10
IST220T0.2G		0.2	2.5	16	10
IST220T0.4G		0.4	2.5	16	10
IST220T0.7G		0.75	2.5	16	10
IST220T1.5G		1.5	2.5	16	10
IST220T2.2G		2.2	2.5	16	10
IST220T3.7G/5.5P	CD11 0001/ T0/0011	3.7/5.5	4	25	16
IST220T5.5G	3PH 380V 50/60Hz	5.5	4	25	16
IST220T7.5P		7.5	4	25	16
IST220T7.5G/11P		7.5/11	6	40	25
IST220T11G/15P		11.0/15.0	6	63	32
IST220T15G/18.5P		15/18.5	6	63	50
IST220T18.5G/22P		18.5/22	10	100	63
IST220T22G/30P		22/30	16	100	80
IST220T30G/37P		30/37	16	125	100
IST220T37G		37	16	160	100

## 4-1-4 Specification of main circuit terminal

User Manual


Open the cover, the main circuit terminal as following

1. IST210A:The arrangement of main circuit terminals is shoum below

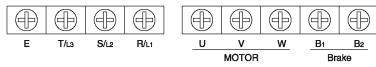


2. IST220:The arrangement of main circuit terminals is shoum below


Type a: 3ph380v0.2-2.2kw&1ph220v0.4-1.5kw

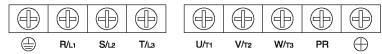


Type b: 3ph380v3.7-5.5kw&1ph220v2.2-3.7kw

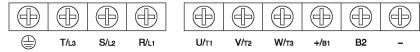

Type c: 3ph380v7.5-11kw

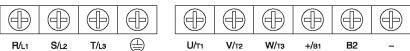


Type d: 3ph380v15-22kw

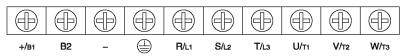


The main circuit terminal description

Terminal Symbol	Terminal Name	Description
R,S,T	AC power input	Connect to the commercial power supply.
U,V,W	Inverter output	Connect a three-phase motor.
B1,B2	Brake resistor connection	Connect brake resistor.
ψE	Earth (ground)	For earthing (grounding) the inverter chassis. Must be earthed (grounded)

Cable connection ecamples:

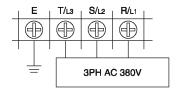


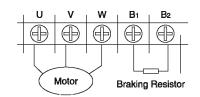

# 4-2 Control Circuit Terminal


Wiring

### 4-2-1 Basic wiring diagram

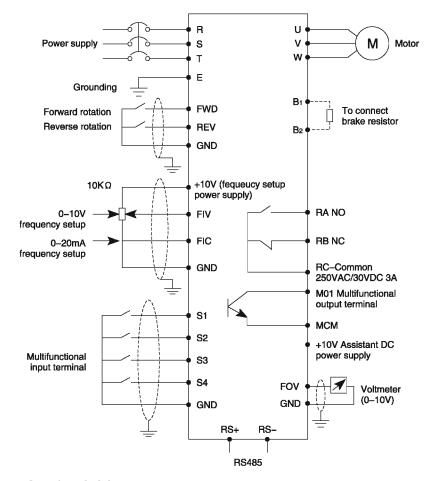

### 4-2-2 Control terminals layout

(1) IST210A series control terminals layout

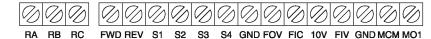

(2) IST220 series control terminals layout

FWD	REV	S1	S2	S3	S4	10V	FIV	FIC	GND	FOV	мсм	MO1	GND	RS-	RS+
RA	RB	RC	;												

Indicates that terminal functions can be selected using P315 to P320. (I/O terminal function selection)

(1) Input signals

(1) Input signals				
Туре	Terminal Symbol	Terminal Name	Description	Refer to page
	FWD	Forward rotation start	Turn on the FWD signal to start forward rotation and turn it off to stop. (multifunctional input terminal)	35
Contact input	REV	Reverse rotation start	Turn on the REV signal to start reverse rotation and turn it off to stop. (multifunctional input terminal)	35
	S1		multifunctional input terminal 1	35
	S2		multifunctional input terminal 2	35
	S3		multifunctional input terminal 3	35
	S4		multifunctional input terminal 4	
	+10V	Frequency setting power supply	Frequency setting power supply. (FIV, FIC)	36
Frequency	FIV	Frequency setting(voltage)	Inputting 0 to 10VDC provides the maximun output frequency at 10V and makes input and output proportional.	36
setting	FIC	Frequency setting(current)	Inputting 0 to 20mADC provides the maximun output frequency at 20mA and makes input and output proportional.	36
	GND	Frequency setting common	Common terminal for terminals FIV, FIC, +10V, and analog output terminal FOV, FOC	36

# (2) Output signals

Туре	Terminal Symbol	Terminal Name	Description	Refer to page
Contact output	MO1	Multifunction output terminal (optical coupling)	Permissible load 24VDC 0.1A	36
	RA	Relay out 1	RC: common	36
	RB		RB: NC 250VAC/3A	
	RC		RA: NO 30VDC/3A	
Analog output	Anglog voltage		Output signal 0 to 10VDC, permissible load current 1mA.  The output signal is proportional to the output frequency.	36

Wiring User Manual

# (3) Communication

Туре	Terminal Symbol	Terminal Name	Description	Refer to page
DC405	RS+	Frequency setting (current)	With the RS+, RS, connector, communication	36
RS485	RS-	Frequency setting common	can be made through RS486	36

# 4-2-4 Wiring instructions

- (1) Use shielded or twisted cables for connection to the control circuit terminals and run them away from the main and power circuits(including the 200V relay sequence circuit).
- (2) Use two or more parallel micro-signal contacts or twin contacts to prevent a contact faults when using contact inputs since the control circuit input signals are micro-currents.
- (3) Do not apply a voltage to the contact input terminals of the control circuit.
- (4) Always apply a voltage to the alarm output terminals (RA, RB, RC, M01)via a relay coil, lamp, etc.
- (5) It is recommended to use the cables of 0.75mm² gauge for connection to the control circuit terminals.
- (6) The wiring length should be 30m maximum.


# **Chapter 5 Operation**

The digital manipulator is located at the center of the inverter, and it is divided into two parts: displaying part and key control part.


The displaying part indicates the parameter setting and different operation status, and the key control part is the communication channel between the user and the inverter.

# 5-1 Operation Panel (keyboard)

(1) IST210A schematic diagram of the keyboard

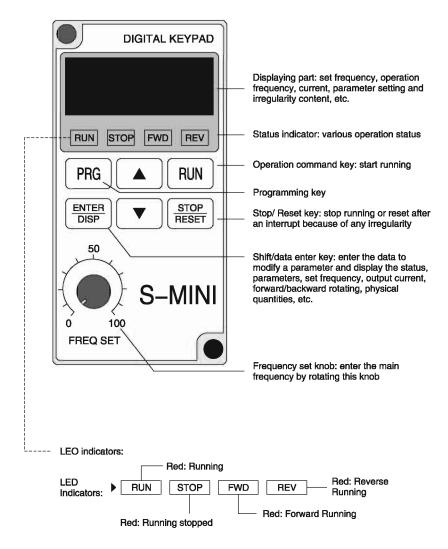

# (1) IST220 schematic diagram of the keyboard

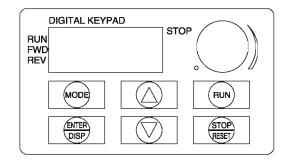

Note: The key MODE function of IST220 Series is the same as the key PRG function of IST210A Series.

### 5-1-1 Key Function description

Key Symbol	Function description
PRG	Function selecting key, for select a function menu
<b>▲</b>	Figure modifying key, for modify a function code and parameter
ENTER DISP	Shift key or enter key Shift to an another digit or switch to another display by short-pressing, confirm a setting by long-pressing
0 100	Turn to another frequency by rotating the potentiometer when the frequency is set to be controlled by the manipulator potentiometer
RUN	Command for running
STOP RESET	Command for stopping (applicable in the manipulator controlled status) or reset after an fault

# 5-1-2 Displays description

	Display item	Description
1	F00.0	Frequency setting after the power supply is switched on
2	H00.0	Actual running frequency
3	A00.0	Current for motor running
4	Frd rEu	Motor rotating direction

<sup>\*</sup>The above display items can be switched and read by short pressing the DISP key on the main menu.

# 5-2 Operating Panel Operation Instruction

(1) Parameter setting <taking modifying P104 reverse Valid setup as example>

Program	Key name	Display	Description
1	Power on	F00.0	Display the frequency setting (initial display).     The inverter is standing by
2	Press PRG	P000	To enter the parameter setup state, and the first letter blinks. (means modifiable item)
3	Press for four times	P004	The digit is modified into "4" from "0".
4	Quickly press ENTER 2 times DISP (quick press means shift)	P004	Shift leftward for two digits and the third digit will clicker.
5	Press for once	P104	The digit is modified into "1" from "0".
6	Press and hold  ENTER DISP	STOP FWD	Enter the parameter setting interface.
7	Press 🔻	STOP FWD	Modified "1" into "0".

Program	Key name	Display	Description
8	Press and hold  ENTER DISP	P105	To confirm that the value "P104" has been modified.
9	Press	F00.0	Return back to the initial display.

### Note:

Operation

- 1 .Pressing PRG can interrupt the modification and return back to the main display interface.
- 2. When a modification is confirmed, An Err may be displayed to show the parameter modification is falled.

# (2) Status display and inquiry

Parameter set: the frequency for the startup and shutdown (P102=0) of the frequency converter controlled by the manipulator is given by the potentiometer of the manipulator (P101=3).

Step	Key name	Display	Description
1	Power on	F00.0	Frequency setting display state.
2	Rotate 500	F05.0	Frequency Setting 5.0Hz.
3	Press RUN	F05.0	Forward running of the frequency is turned on.
4	Press ENTER DISP	F05.0	Switch to the actual running frequency display.
5	Rotate 50	H15.0	Modify the set frequency, and the actual running frequency is modified into 15Hz from 5Hz.
6	Press ENTER DISP for once	A00.0	Switch to the current display when the current output is 0A.
7	Press ENTER DISP for once	Frd FwD	Switch to the setting interface (press to switch the rotating direction)
8	Press PRG for once	P000	Switch to the parameter setting status.

Step	Key name	Display	Description
9	Press for six times	P006	Select parameter code P006 to be modified.
10	Long press ENTER DISP	022.8	P006 content: the current temperature of the frequency converter is 22.8 $^{\circ}$ C.
11	Press PRG for twice	F15.0	Return back to the main display, the set frequency is 15Hz
12	Press STOP RESET	F15.0	During the frequency converter is decelerating before stop, the key will flicker and then the and keys will turn on, and the set frequency displayed is 15Hz

Note: The set frequency, running frequency, output current and running speed of the frequency converter can be monitored by switching keys during operation, and the main display can be modified by P000 setting as per the practical requirement, and meanwhile the related content can be monitored by the user through P001–P018.

# Chapter 6 IST220 Series Application For Solar Water Pump

# 6-1 Selection Table

Operation

		Solar P	V Input Paramete	or(DC)	Generator Ir Parameter(/	
Model	Max Voltage (V)	Min Voltage (V)	Recommended Voltage(V)	Recommended Power(kW)	Input Voltage (V)	Generator Capacity (kVA)
1PH 220V 50/60H	łz					
IST220S0.4G				0.6-0.8		1
IST220S0.7G				0.9-1.2		1.5
IST220S1.5G	DC450	DC180	DC280-360	1.8-2.4	1PH AC220 ± 10%	3
IST220S2.2G				2.7-3.5		4
IST220S3.7G				4.8-6.4		5.9
3PH 220V 50/60H	łz					
IST220T0.2G				0.4-0.6	3PH AC380 ± 15%	1
IST220T0.4G				0.6-0.8		1
IST220T0.7G				0.9-1.2		1.5
IST220T1.5G				1.8-2.4		3
IST220T2.2G				2.7–3.5		4
IST220T3.7G				4.8-6.4		5.9
IST220T5.5G	D0000	DOGEO	D0500 600	6.6-8.8		8.9
IST220T7.5G	DC800	DC350	DC500-600	9–12		11
IST220T11G				13.2–17.6		17
IST220T15G				18–24		21
IST220T18.5G				22.2-29.6		24
IST220T22G				26.4-35.2		30
IST220T30G				36–48		40
IST220T37G				44–59.2		57

# 6-2 Standard Function Parameters


Code	Function	Function	Unit	Default
P101	F1.01=6	For sunny control	1	0
P102	F1.02=0 control mode	0: key board 1: I/O Control		0
P260	Voltage1 (read only)			READ
P261	Compare FREQ	F2.60= f2.62(200V) in case of less than F2.61 (35HZ)Hz, otherwise		35.0HZ
P262	Compare DCV	F2.60=Output frequency * Any variable parameter (F2.63).		200V
P263	Rate			6.20
P264	Voltage2	If DCV <f2.64, and="" down="" freq="" is="" stop="" td="" to="" zero<=""><td>130.0V</td></f2.64,>		130.0V
P280	Voltage2	If DCV>F2.80, then FREQ+F2.81=FREQ	V	310.0V
P281	Inc freq by DCV >F2.80	II DCV>F2.00, tileti FREQ+F2.01=FREQ	Hz	0.02HZ
P265	Voltage change value during	If DCV>=F2.60 and dcv is increase, Freq = Freq + incDcv * F2.67 /t2.65		5.0V
P266	Dec Freq	If DCV <f2.60 and="" dcv="" increase,<br="" is="">Freq = Freq + incDcv * F2.67 /f2.65</f2.60>		2.00Hz
P267	Inc Freq	If DCV <f2.60 and="" dcv="" decrease,<br="" is="">Freq = Freq - Dec Dcv * F2.66 /f2.65</f2.60>		2.00Hz
P268	DCV sample time	0.001S - 1.000S		0.018
P269	Inc freq by DCV>F2.60			0.10Hz
P271	Freq of dry run	1) RUNGING, IF OUT FREQ >F2.71, time>F2.72 and current <f2.73, "dy"="" after="" again<="" display="" error.="" f2.74,="" of="" run="" td="" then="" time=""><td>49.0Hz</td></f2.73,>		49.0Hz
P272	Time of dry run			0.08
P273	Percent of current			30%
P274	Delay time of run again	2) if F2.72=0, then no error of "DY".		30 minute
P275	Enable of auto run	1: enable 0: disable If 52.75–1 run after delay time of 52.76		1
P276	Delay time	If F2.75=1, run after delay time of F2.76 (This function only for F1.02=0 . If F1.02=1, Run or stop by FWD or REV)		60s
P317 ~P322		25: define S1 is bottom of tank 26: define S2 is top of tank S1:Bottom S2:Top 0 0 Motor Run 0 1 Invalid State 1 0 No change 1 1 Motor off 30: S1(S2S6) connect to sc: tank is Fill 31: S1(S2S6) connect to sc: tank is not Fill		

# 6-3 Commissioning Guide

### 6-3-1 Wiring and Commissioning steps

# 6-3-1-1 Commissioning steps during Solar power supply

1. Wire according to the diagram and check the wiring is correct, then switch on Q2.

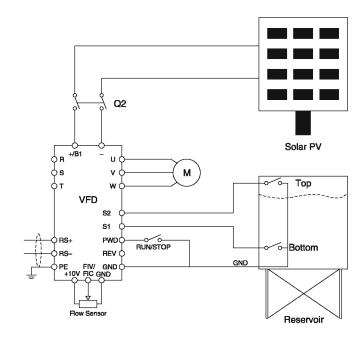

# 2. Detection of water yield for water pumps

Set the lower limit of output frequency P106=10.00Hz, stop mode P201=0 and coast to stop.

And then, set P101=6 to enable the special functions for water pumps, click "RUN" key and observe the running frequency and water yield. If the operation frequency or water yield is low at normal light, the motor wires may be reserved, so it is necessary to exchange the wiring.

# 3. Commissioning of MPPT speed tracking

P264~P267 is MPPT mode, voltage tracking maximum power setting, the bus voltage must be in the middle of P264 and P280, otherwise the maximum power can't be tracked.

Voltage setting as under:

- (a) If the rated voltage of motor is 415V, P264=470 (minimum reference voltage), P280=630 (maximum reference voltage)
- (b) If the rated voltage of motor is 380V, P264=430 (minimum reference voltage), P280=580 (maximum reference voltage).
- (c) If the rated voltage of motor is 220V, P264=250 (minimum reference voltage), P280=340 (maximum reference voltage).

Above settings are only for reference, which can be adjusted according to the situation in the field.

Note: If the minimum reference voltage is set too small, when the actual voltage is over voltage, the output frequency will be reduced, when the pump speed is too low, the water pressure is not enough, will cause the idling.


IST220 Series Application For Solar Water Pump

### 4. Fault setting

If setting under dry run / no water, settings are P271~P274, P271 is frequency of dry run, time of dry run P272>0s, P273 is Percent of motor operating current, normally, is default value, P274 is delay time of restart, normally, is default or longer.

# 6-3-1-2 Commissioning steps during grid power supply

1. Wire according to the diagram and check the wiring is correct or not.

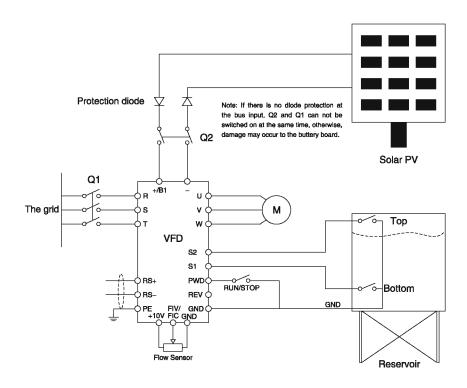

- 2. Switch off Q2, then switch on Q1, keep the same as above picture.
- 3. When change to Solar power supply, switch off Q1, then switch on Q2.

Note: If there is no diode protection at the bus input, Q2 and Q1 can not be switched on at the same time, otherwise, damage may occur to the buttery board.

# **Chapter 7 Table of Function Parameters**

This chapter explains the "PARAMETERS" for use of this product. Aways read this instructions before use. Parameter list

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P000	Main display data selection	0-32	1	1	41
	P001	Display the set frequecy.	Read only			41
	P002	Display the output frequency	Read only			41
	P003	Display the output current	Read only			42
	P004	Display the motor speed.	Read only	-		42
	P005	Display the DC bus voltage value.	Read only			42
	P006	Display the temperature of inverter.	Read only			42
	P007	Display PID	Read only			42
Monitor	P010	Alarm record 1	Read only		<u>L2</u>	42
functions	P011	Alarm record 2	Read only			42
	P012	Alarm record 3	Read only	<del>   </del>	****	42
	P013	Alarm record 4	Read only			42
	P014	The frequency setting in the last alarm.	Read only		3	42
	P015	The output frequency in last alarm.	Read only		-	42
	P016	The output current in last alarm.	Read only	A <u>Marina</u>	120000	42
	P017	The output voltage in last alarm.	Read only	<u></u>	<del></del>	42
	P018	The output DC bus voltage in last alarm.	Read only			42
Basic functions	P100	Digital frequency setting	0.00-Maximum frequency	0.01	0.00	43

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P101	Frequency setting selection	0: Digital frequency setting (P100) 1: Analog voltage (0-1 OVDC) 2: Analog current (0-20mADC) 3: Setting dial (Operation panel) 4: UP/DOWN frequency setting 5: RS485 communication frequency setting	1	0	44
	P102	Start signal selection	0: Operation panel (FWD/REV/STOP) 1: I/O terminal 2: Communication (RS485)	1	0	46
	P103	"stop" key lock operation selection	"Stop"key lock mode invalid     "Stop" key lock mode valid	1	1	48
Basic functions	P104	Reverse rotation prevention selection	Reverse rotation disallowed     Reverse rotation allowed	1	1	48
	P105	Maximum frequency	Minimum frequency~400.00Hz	0.01	0.00	49
	P106	Minimum frequency	0.00~maximum frequency	0.01	0.00	49
	P107	Acceleration time 1	0~999.9s	0.1	Depends on models	49
	P108	Deceleration time 1	0~999.9s	0.1	Depends on models	49
	P109	V/F maximum voltage	V/F intermediate voltage~500.0 V	0.1	400.0	49
	P110	V/F base frequency	V/F intermediate frequency~max frequency	0.01	50.0	49
	P111	V/F intermediate voltage	V/F minimum voltage ~V/F maximum voltage	0.1	Changing	50
	P112	V/F intermediate frequency	V/F minimum frequency ~V/F base frequency	0.01	2.50	50
	P113	V/F minimum voltage	0-V/F intermediate voltage	0.1	15.0	50

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P114	V/F minimum frequency	0-V/F intermediate frequency	0.01	1.25	50
	P115	Carrier frequency	1.0K-15.0K	0.1	Changing	51
	P116	Automatic carrier line up	Reserved	1	0	041
	P117	Initialization of parameters	8: Initialization of Factory Setting	1	0	52
	P118	Parameter lock	0: Unlock parameters 1: Lock up parameters	1	0	52
	P200	Start mode selection	0: regular start 1: restart after inspection	1	0	52
	P201	Stop mode selection	0: deceleration to a stop 1: coasting	1	0	53
	P202	Starting frequency	0.10~10.00Hz	0.01	0.5	53
	P203	Stopping frequency	0.10~10.00Hz	0.01	0.5	54
	P204	DC injection brake operation current (start)	0~150% rated motor current	1%	100%	54
Basic functions	P205	DC injection brake operation time (start)	0~25.0S	0.1	0	54
	P206	DC injection brake operation current (stop)	0~150% rated motor current	1%	100%	55
	P207	DC injection brake operation time (stop)	0~25.0S	0.1	0	55
	P208	Torque boost	0~20.0%	1	5%	55
	P209	Rated motor voltage	0~500.0V	0.1	380.0	56
	P210	Rated motor current	0~current of system	0.1	Changing	56
	P211	No load current ratio of motor	0~100%	0.1	40%	56
	P212	Rated motor rotation speed	0~6000r/min	1	1420	56
	P213	Number of motor poles	0~20	1	4	56
	P214	Rated motor slip	0~10.00Hz	0.01	2.50	56
	P215	Rated motor frequency	0~400.00Hz	0.01	50.00	56

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P216	Resistance of stator	0–100 Ω	0.01	0	56
Basic	P217	Resistance of rotor	0–100Ω	0.01	0	56
functions	P218	Self inductance of rotor	0-1.000H	0.01	0	57
	P219	Mutual inductance of rotor	0-1.000H	0601	0	57
	P300	FIV minimum voltage input	0-FIV maximum voltage	0.1	0	57
	P301	FIV maximum voltage input	FIV minimum voltage ~10V	0.1	10.0	57
	P302	FIV input filter time	0~25.0S	0.1	1.0	57
	P303	FIC minimum current input	0-FIC maximum current	0.1	0	57
	P304	FIC maximum current input	FIC minimum current input-20mA	0.1	20.0	57
	P305	FIC input filter time	0~25.0S	0.1	1.0	58
	P306	FOV minimum voltage output	0~FOV maximum volage	0.1	0	58
	P307	FOV maximum voltage output	FOV maximum voltage output~10V	0.1	10.0	58
I/O	P308	FOC minimum current output	0-FOC maximum current output	0.1	0	59
functions	P309	FOC maximum current output	FOC minimum current output-20.0	0.1	20.0	59
	P310	Frequency of low analog	0~600.00	,	0.00	59
	P311	Direction of low analog	0/1	1	0	59
	P312	Frequency of high analog	0~600.00	0.01Hz	50.00	59
	P313	Direction of high analog	0/1	1	0	59
	P314	Analog input reverse selection	0/1	1	0	59
	P315	Input terminal FWD (0-32)	0: Invalid 1: Jog 2: Jog Forward 3: Jog reverse 4: Forward/reverse 5: Run 6: Forward 7: Reverse	1	6	62

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P316	Input terminal REV (0~32)	8: Stop 9: Multi-speed 1 10: Multi-speed 2 11: Multi-speed 3 12: Multi-speed 4	1	7	62
	P317	Input terminal S1 (0~32)	12: Multi-speed 4 13: Accleration/ Deceleration terminal 1 14: Accleration/ Deceleration terminal 2 15: Frequency increase signal (UP) 16: Frequency decrease signal(DOWN) 17: Emergency stop signal	1	1	62
	P318	Input terminal S2 (0~32)		1	18	62
I/O functions	P319	Input terminal S3 (0~32)		1	15	62
	P320	Input terminal S4 (0~32)	18: Inverter reset signal 19: PID in running 20: PLC in running 21: Start signal for timer 1 22: Start signal for	1	16	62
	P321 (0~32)	Reserved	timer 2 23: Counter pulse signal 24: Counter reset signal 25: Memory clear 26: Start winding operation	1	8	62
	P322 (0~32)	Reserved		1	9	62

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P323	Output terminal M01 (0~32)	0: Invalid 1: In running 2: Frequency reached 3: Alarm 4: Zero speed 5: Frequency 1 reached 6: Frequency 2 reached 7: Accleration 8: Deceleration 9: Indication for under	1	01	67
	P324	Reserved	voltage 10: Timer 1 reached 11: Timer 2 reached 12: Indication for completion of phase 13: Indication for completion of procedure 14: PID maximum 15: PID minimum 16: 4–20mA disconnection	1	02	67
I/O functions	P325	Alarm output terminal RA, RB, RC (0~32)	17: Overload 18: Over torque 26: Winding operation completed 27: Counter reached 28: Intermediate counter reached 29: Water supply by constant voltage "1" turn on "0" turn off	1	03	67
	P326	Output terminal FOV (0~7)	0: Frequency output 1: current output 2: Dc bus voltage 3: Ac voltage 4: Pulse	1	0	69
	P327	Reserved	output,1 pulse/ Hz 5: 2pulses/Hz 6: 3 pulses/Hz 7: 6 pulses/Hz	1	1	69

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P400	Jog frequency setting	0.00~maximum frequency	0.01	5.00	70
	P401	Acceleration time 2	0~999.9s	0.18	10.0	71
	P402	Deceleration time 2	0~999.9s	0.18	10.0	71
	P403	Acceleration time 3	0~999.9s	0.18	20.0	71
	P404	Deceleration time 3	0~999.9s	0.1S	20.0	71
	P405	Acceleration time 4/Jog acceleration time	0~999.9s	0.18	2.0	71
	P406	Deceleration time 4/Jog deceleration time	0~999.9s	0.18	2.0	71
	P407	Designated value of counter	0~999.9s	1	100	71
	P408	Intermediate value of counter	0~999.9s	1	50	71
Secondary application	P409	Limitation of acceleration torque	0~200%	1%	150%	71
	P410	Limitation of constant speed torque	0~200%	1%	00	72
	P411	Over voltage prevention selection in deceleration	0/1	1	1	72
	P412	Automatic Voltage regulation selection	0~2	1	1	73
	P413	Automatic- energy-saving selection	0~100%	1%	00	73
	P414	DC Braking voltage	Depends on models	0.1	800.0	73
	P415	Braking duty	40~100%	1	50%	73
	P416	Restart after instant power off	0~1	1	0	74
	P417	Allowable time of power cut	0~10s	1	5.08	75

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P418	Flank restart Current limited level	0~200%	1	150%	75
	P419	Flank restart time	0~10s	1	50	75
	P420	Fault restart times	0~5s	1	0	75
	P421	Delay time for restart after fault	0~100	2	2	75
	P422	Over torque action	0~3	1	0	76
	P423	Over torque detection level	0~200%	1	00	76
	P424	Over torque detection time	0~20.0S	0.1	00	76
	P425	Reaching Frequency 1	0.00~maximum frequency	0.01	100	77
Secondary application	P426	Reaching Frequency 2	0.00~maximum frequency	0.01	5.0	77
	P427	Timer 1 setting	0~999.9s	0.1	0	77
арриосион	P428	Timer 2 setting	0~999.9s	1	0	77
	P429	Constant- speed torque limiting time	0~999.9s	0.1	Changing	77
	P430	Width of arrival of frequency in hysteretic loop	0.00~2.00	0.01	0.50	77
	P431	Jump frequency 1	0.00~maximum frequency	0.01	0	78
	P432	Jump frequency 2	0.00~maximum frequency	0.01	0	78
	P433	Jump frequency hysteresis loop width	0.00~2.00	0.01	0.50	78
	P434	UP/DOWN frequency step	0~10.00Hz	0.01	0.1	*
	P435	UP/DOWN frequency Memory options	0: memory 1: No Memory	1	0	
PLC	P500	PLC memory mode	0~1	1	0	78
operation	P501	PLC starting mode	0~1	1	0	79

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P502	PLC running mode	O: PLC stops after running for one cycle I: PLC stop mode, it stops after running for one cycle PLC cycle running PLC stop mode, cycle running mode PLC operates at the last frequency after running for one cycle.	1	0	79
	P503	Multi-speed 1	0.00~maximum frequency	0.01	10.0	80
	P504	Multi-speed 2	0.00~maximum frequency	0.01	15.0	80
	P505	Multi-speed 3	0.00~maximum frequency	0.01	20.0	80
	P506	Multi-speed 4	0.00-maximum frequency	0.01	25.0	80
	P507	Multi-speed 5	0.00~maximum frequency	0.01	30.0	80
PLC	P508	Multi-speed 6	0.00~maximum frequency	0.01	35.0	80
operation	P509	Multi-speed 7	0.00~maximum frequency	0.01	40.0	80
	P510	Multi-speed 8	0.00~maximum frequency	0.01	45.0	80
	P511	Multi-speed 9	0.00~maximum frequency	0.01	50.0	80
	P512	Multi-speed 10	0.00~maximum frequency	0.01	10.0	80
	P513	Multi-speed 11	0.00~maximum frequency	0.01	10.0	80
	P514	Multi-speed 12	0.00~maximum frequency	0.01	10.0	80
	P515	Multi-speed 13	0.00~maximum frequency	0.01	10.0	80
	P516	Multi-speed 14	0.00~maximum frequency	0.01	10.0	80
	P517	Multi-speed 15	0.00~maximum frequency	0.01	10.0	80
	P518	PLC operation time 1	0~999.9s	18	100	80
	P519	PLC operation time 2	0~999.9s	18	100	80

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P520	PLC operation time 3	0~999.9s	18	100	80
	P521	PLC operation time 4	0~999.9s	18	100	80
	P522	PLC operation time 5	0~999.9s	18	100	80
	P523	PLC operation time 6	0~999.9s	18	0	80
	P524	PLC operation time 7	0~999.9s	18	0	80
	P525	PLC operation time 8	0~999.9s	18	0	80
PLC	P526	PLC operation time 9	0~999.9s	18	0	80
operation	P527	PLC operation time 10	0~999.9s	18	0	80
	P528	PLC operation time 11	0~999.9s	18	0	80
	P529	PLC operation time 12	0~999.9s	18	0	81
	P530	PLC operation time 13	0~999.9s	18	0	81
	P531	PLC operation time 14	0~999.9s	18	0	81
	P532	PLC operation time 15	0~999.9s	18	0	81
	P533	PLC operation direction	0~32767	1	0	81
	P600	PID starting mode	0: PID disable 1: PID start 2: PID start by external terminal	1	0	83
	P601	PID operation mode selection	Negative feedback mode     Positive feedback mode	1	O <sub>D</sub>	83
PID operation	P602	PID action set point	0: figure mode (P604) 1: FIV 2: FIC	1	0	84
	P603	PID feedback value selection	0: FIV 1: FIC 2: FIV-FIC 3: FIC-FIV	1	0	84
	P604	PID figure target value setting	0.0~100.00%	0.1%	0.0%	84

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
	P605	PID upper limit alarm value	0~100.00%	1%	100%	86
	P606	PID lower limit alarm value	0~100.00%	1%	0%	86
	P607	PID proportional band	0.0~200.00%	0.1%	100%	86
	P608	PID integral time	0.0~200.0 S.0 means closed	0.1s	0.1s	86
	P609	PID differential time	0.00.0~20.00 S.0 means closed	0.1s	0.0	86
	P610	PID action step-lergth	0.00~1.00Hz	0.01	0.10Hz	87
	P611	PID standby frequency	0.00-120.0Hz (0.00Hz) 0.00Hz means sleep function is closed	0.01	0.00Hz	87
	P612	PID standby duration	0~200s	18	10s	87
	P613	PID wake-up value	0~100%	1%	0	87
PID operation	P614	PID corresponding value of display	0~10000	1	1000	88
	P615	PID digit of display	1~5	1	1	88
	P616	PID decimal digits of display	0~4	1	1	88
	P617	PID upper limit frequency	0~max. frequency	0.01	48.00	*:
	P618	PID lower limit frequency	0~max. frequency	0.01	20.00	4
	P619	PID working mode	O: Always work (PID function open) 1: When feedback reaches upper limit (P605), it will work at Min-frequency. When feedback reaches lower limit (P606), PID will begin to work.	1	0	
RS-485 Communication	P700	Communication speed	0: 4800bps 1: 9600 bps 2: 19200 bps 3: 38400 bps		o	88

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value	Refer To Page
RS-485 Communication	P701	Communication mode	0: 8N1 FOR ASC 1: 8E1 FPR ASC 2: 801 FOR ASC 3: 8N1 FOR RTU 4: 8E1 FOR RTU 5: 801 FOR RTU			89
	P702	Communication address	0~240	1	0	89
	P800	Advanced application parameter lock	0: Locked 1: Unlocked	1	111	94
	P801	System 50Hz/ 60Hz setting	0~50Hz 1~60Hz	1	0	95
	P802	Constant torque or variable torque selction	0: Constant torque 1: Variable torque	1	0/1	95
	P803	Over-voltage protection setting	changing	1	changing	95
	P804	Under-voltage protedion setting	changing	1	changing	95
	P805	Over-temperature protection setting	40~120℃	1	85/95℃	95
	P806	Current display filter time	0~10.0	0.1	2.0	95
Advanced application	P807	0-10V analogue output low end calibration coefficient	0-65535	1	-	96
	P808	0-10V analog output high end calibration coefficient	0-65535	1	-	96
	P809	0–20mA analogue output low end calibration coefficient	0-65535	1	_	96
	P810	0–20mA analog output high end calibration coefficient	0-65535	1	-	96
	P811	Compensation frequency point for dead time	0.00~maximum frequency	0.01	0.00	*:
	P812	UP/DOWN frequency Memory options	0: memory 1: No Memory	1	0	,

# **Chapter 8 Detailed Explanations of Functional Parameters**

# 8-1 Parameters for Monitoring

Parameters	Name	Setting Range	Descrption
		00	Displays the set frequency
		01	Displays the inverter output frequency
		02	Displays the inverter output current
		03	Displays the motor speed
		04	Displays the DC bus voltage
		05	Displays the inverter temperature
	Main display data selection (Initial value: 00) Setting range (00–32)	09	Displays record of last faults (1)
		10	Displays record of last faults (2)
		11	Displays record of last faults (3)
P000		12	Displays record of last faults (4)
		13	Displays the recently set frequency of the inverter when the fault occured
		14	Displays the recently output frequency of the inverter when the fault occured
		15	Displays the recently output current of the inverter when the fault occured
		16	Displays the recently output voltage of the inverter when the fault occured
		17	Displays the recently DC bus voltage of the inverter when the fault occured
		18	Displays the recently temperature of the inverter when the fault occured

User can set the initial display of the inverter through parameter P000.

For example, in order to monitor rotation speed through the operation panel, user can set parameter P000 to "03".

Initial value of P000 is "00", therefore, if not been changed, inverter will display the set frequency.

P001	Display the set frequency	
	It displays the set frequency of inverter.	

You can monitor the set frequency of inverter by examining the content of this parameter.

P002	Display the output frequency	
	It displays the present output frequency of inverter.	

You can monitor the present output frequency of the inverter by examining parameter P002.

P003	Display the output current	
	It displays the output current of inverter.	

You can monitor the actual output current by examining parameter P003.

P004	Display the motor speed	
	It displays the actual rotation speed of motor.	

You can monitor the actual rotation speed of motor by examining parameter P004.

P005	Display the DC bus voltage value	
	It displays the voltage of DC bus in main circuit of inverter.	

You can monitor the actual voltage of DC bus by examining parameter P005.

P006	Display temperature of inverter
	It displays the actual temperature of inverter.

You can monitor the actual temperature of inverter by examining parameter P006, which will help you make judgment on the running condition of inverter.

P010	Alarm record 1
P011	Alarm record 2
P012	Alarm record 3
P013	Alarm record 4
	It records the latest four faults of inverter.

You can check the conditions of latest four faults by examining P010 to P013. These four parameters can help user make judgment on the running condition of inverter and find the cause of fault and eliminate hidden trouble.

P014	Displays the recently set frequency of the inverter when the fault occured			
P015	Displays the recently output frequency of the inverter when the fault occured			
P016	Displays the recently output current of the inverter when the fault occured			
P017	Displays the recently output voltage of the inverter when the fault occured			
P018	Displays the recently DC bus voltage of the inverter when the fault occured			
	They display the detailed status when the latest fault occurs. You can check the actual frequency setting, actual output frequency, actual output voltage, and do voltage of main circuit in inverter by examining these parameters respectively.			

You can check the detailed status when the latest fault occurs by examining the content of P014—P018. You can examine the frequency setting, actual output frequency, and actual output current, actual output voltage, DC bus voltage of main circuit.

According to the above data, you can analyze the cause of fault and find a solution quickly, which will help maintenance personnel in repair work.

For IST210A/IST220 series inverter, you can use parameter "F.00" to set the main display data. It's also possible to monitor the data directly through the parameters "P001–P018".

You may monitor the data by pressing the switching key as shown in below table:

Procedure	Press key	Display	Explanation
1	Tum on power	F50.0	Inverter is in standby mode.     The keypad displays frequency setting.     FREE light is on, which means that the keypad is displaying frequency setting.
2	Press RUN	F50.0	Start inverter  ① Inverter is in running and RUN light is on. ② The image displays frequency setting. Forward light is on; inverter is in Forward state.
3	Press ENTER for once	H50.0	Switch display; stop switching when actual output frequency is displayed. Inverter is in Forward running state.  ① The actual output frequency is 50.0Hz.
4	Press ENTER for once	STOP FWD A00.0	Switch display; stop switching when actual output current is displayed.  ① The actual current output is 0A
5	Press ENTER for once	Frd FwD	Display running state.

# 8-2 Basic Parameters

P100	Digital frequency setting		(Initial value: 0.00Hz)	
	Setting range	0.00-Maximum frequency	Unit	0.01

When P101 is set to 0, inverter works in Digital frequency setting mode. The frequency value is set by P100. During running, you can change frequency by modifying the content of parameter P100 or by pressing

key or " when the inverter stops running or when power is off, the modified content can be remembered.

If you change frequency by pressing " key of " key, when the inverter stops running or power is off, the modified content will not be remembered; instead the original P100 will be remembered. When the inverter is started next time, it will operate at the original value of P100.

# P101 Frequency setting selection Initial value: 0 Setting range 0–5 Unit 1 0: Digital frequency setting (P100) 1: Analog voltage (0–10VDC) 2: Analog current (0–20mADC) 3. Setting dial (Operation panel) 4. UP/DOWN frequency setting 5: RS485 communication frequency setting

**Detailed Explanations of Functional Parameters** 

Frequency setting selection can be used to decide the output frequency of inverter.

### 0: Digital frequency setting


The output frequency of inverter is decided by P100. Generally speaking, you can change output frequency

by pressing the " ar " or " wey on Keypad. Refer to P100 for details.


### 1: Analog voltage mode (0-10VDC)

The output frequency of inverter is decided by external voltage signal (0-10V), which is put into inverter through FIV terminal.

There are two modes of external voltage signal: one is setting signal ranging from 0 to 10V; the other is setting by potentiometer. Refer to the following diagram for connection method.

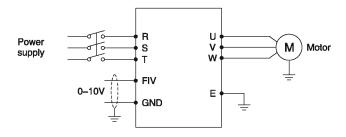


Explanation: control the output frequency through terminal FIV/ FC (0~10V).

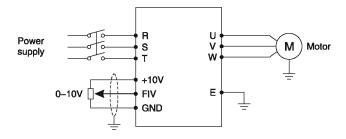

Explanation: control output frequency of inverter by FIV voltage signal sent by external POT (10kΩ)

### 2: Analog current mode (0-20mA DC)

The output frequency of inverter is decided by external current signal (0–20mA). Control the output frequency of inverter by external terminal FIC.

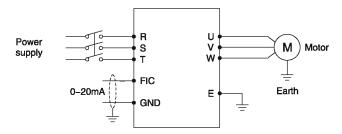

### 3: Setting dial mode (Operation panel)


You can control the running of IST210A/IST220 series inverter by the POT knob on Keypad.

Pay attention to the POT knob in Keypad which enables you to switch between monitoring images.

Turn the change the output frequency


### 4: UP/DOWN setting mode

The output frequency of inverter is controlled by external UP/DOWN terminals. External terminals can be selected from P315 to P322, been selected one of external terminals as UP/DOWN. When UP is valid, the frequency will go up. When DOWN is valid, the frequency will go down. When UP and DOWN are both valid, the frequency will remain the same.

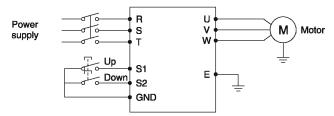

Parameter: P317=15, S1 terminal will be set in UP mode.

P318=16. S2 terminal will be set in DOWN mode.

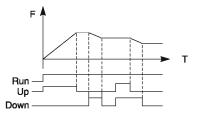

Explanation: when UP is valid (UP is closed), frequency will go up. When DOWN is valid (DOWN is closed), frequency will go down.

Unit

P102


# ② Three–wire type

A three-wire type connection is shown below.

The start self-holding selection becomes valid when the STOP signal is turned on. In this case, the forward/reverse rotation signal functions only as a start signal.

If the start signal (S1/S2) is turned on and then off, the start signal is held and makes a start. When changing the direction of rotation, turn S1(S2) on once and then off.

The stop the inverter, turning off the STOP signal once decelerates it to a stop.

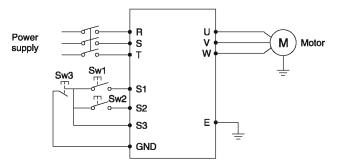

Use S1, S2, or S3 as input terminal for external signal

Parameter: P317=6 S1 is in forward P318=7 S2 is in reverse

> P319=8 S3 is in stop mode P102=1 external terminal input

> > Sw1
> > Sw1
> > Sw1

Start signal selection are used to set running signal source.

Start signal selection

Setting range

Explanation

0: Operation panel (FWD/REV/STOP)

Operation panel gives the running signal. The running of inverter can be controlled by the "

0-2

1: I/O terminal

RUN <sub>" key</sub>

Initial value: 0

(Forward reverse) key on the operation panel. Press "

STOP RESET

2: Communication (RS485)

0: Operation panel (FWD/REV/STOP)

" key to stop running of inverter.

1: I/O terminal


In the initial setting ,the forward/reverse rotation signals are used as start and stop signals .Turn on either of the forward and reverse rotation signals to start the motor in the corresponding direction.

If both are turned off(or on) during operation, the inverter decelerates to a stop(or Keep the original running condition)

You can make two-wire type or three-wire type control mode by using I/O terminal

## 1 Two-wire type

A two-wire type connection is shown below

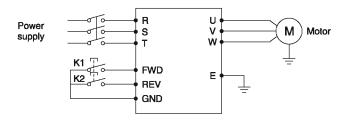

Parameter: P102=1 P315=6 P316=7

### Operation Instruction Inverter

Actuating explanation:

Input Status		Status of inventor	
<b>K</b> 1	K2	Status of inverter	
ON	OFF	Forward	
OFF	OFF	Stop	
OFF	ON	Reverse	
ON	ON	Keep the original running condition	

# **Detailed Explanations of Functional Parameters**

P105	Max. frequency		Initial value: 50.00
	Setting range	Min. output frequency ~400.00Hz	

The output frequency range of inverter is 0.1~400.00Hz. Therefore, inverter can drive the motor higher than 50/60Hz, which could cause mechanical damage or accident.


This parameter is to limit the inverter output frequency in order to prevent motor operating at too higher speed.

P106	Min. frequency		Initial value: 0.00
	Setting range	0.00~max. frequency	

This parameter is to set the minimum output frequency of the inverter If the setting frequency is lower than the Min. frequency, inverter will output on the Min. frequency. In some application, this function could avoid motor overheating due to the low speed operation.

P107	Acc time	Initial value: change
P108	Dec time	Initial value: change
	Setting range	0.1~999.9s

Acc time refers to the time for inverter to reach the max. frequency from 0.00Hz. Dec time refers to the time for inverter to lower to 0.0Hz from max. frequency.

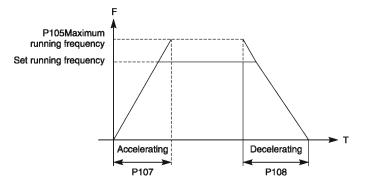

The Default Acc/Dec time is the primary Acc time/ Dec. time. Other Acc time or Dec time can be selected via external terminal.

P109	V/F maximum voltage		Initial value: 380	
	Setting range	V/F intermediate voltage~500.00	Unit: 0.01	
P110	V/F fundamental frequency		Initial value: 50	
	Setting range	V/F intermediate frequency ~max. frequency	Unit: 0.01	

## 2: RS485 mode


Inverter can receive command and exchange data with computer by serial communication.

P103	"stop" key lock operation selection Initial ve			nitial value:
	Setting range	0–1	Unit	1
	Explanation	0: "Stop" key lock mode inva 1: "Stop" key lock mode valie		

The "STOP" key operation of the operation panel can be made invalid to prevent unexpected stop.

Set "0" in P103,then press "ENTER" for 2s to make the "STOP" key operation invalid, and "STOP" key can not stop running of inverter

Set "1" in P103,then press "ENTER" for 2s to make the "STOP" key operation valid, and "STOP" key can stop running of inverter

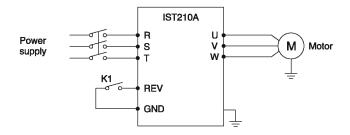

Procedure	Input	Explanation
1	K1 close	Reverse of inverter is started
2	(K1 open) press stop key	Inverter stops
3	K1 open	Running signal is removed
4	K1 close	Reverse of inverter is started

P104	Reverse prevention setting			Initial value: 1	
	Setting range	0–1	Unit	1	
	Explanation	0: Reverse prohibited 1: Reverse allowed			

Many devices only allow rotation in single direction. In this case, you can set the machine in single rotation mode by this parameter

### 0: Reverse prohibited

Reverse of motor is prohibited. When P104 is set at reverse prohibited, switch between Forward and reverse is invalid.

### 1: Reverse allowed

Reverse of motor is enabled, switching between forward and reverse is valid.

P111	V/F intermediate voltage		Initial value: change
	Setting range	V/F minimum voltage~V/F maximum voltage	Unit: 0.1
P112	V/F intermediate frequency		Initial value: 2.5
	Setting range	V/F minimum frequency~ V/F fundamental frequency	Unit: 0.01
P113	V/F minimum voltage		Initial value: 15
	Setting range	0.0~V/F intermediate voltage	Unit: 0.1
P114	V/F minimum frequence	y	Initial value: 1.25
	Setting range	0.0~V/F intermediate frequency	Unit: 0.01


Parameters from P109 to P114 determine the V/F curve of inverter.

Set corresponding V/F curves according to different loads.

Constant torque curve: application for constant torque load, output voltage and output frequency are in linear relation.

Down (variable) torque curve: application for variable torque load, like fan and pump. Load will increase with the increase of rotation speed.

High start torque curve: application for heavy load and load need high starting torque.

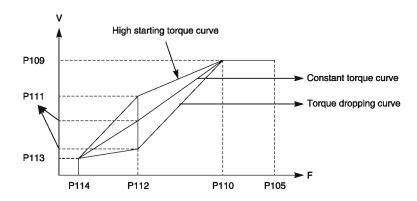

P109: V/F maximum voltage, V/F maximum voltage can be set according to the motor connected. Generally, it will be set at the rated voltage of motor. When motor is very near to inverter, usually within 30m, it should be set at a higher value.

# P110: V/F fundamental frequency

V/F fundamental frequency, please set it at the running voltage frequency of motor. Generally, do not change V/F fundamental frequency setting; or else, it is very likely to damage motor.

### P111: V/F intermediate voltage

**Detailed Explanations of Functional Parameters** 

Set V/F intermediate voltage according to the specific load. Improper setup can cause over current of motor or insufficient torque output, or even cause inverter protection. Increasing the value of P111 can increase output torque and output current. Please monitor output current while changing the value of P111. While changing the value of P111, adjust the value slowly until the necessary output torque is reached. Too higher setting may cause inverter protection or fault.

# P112: V/F intermediate frequency

V/F intermediate frequency determines the intermediate point of V/F curve. Improper setup can cause insufficient torque or over current protection of inverter. Generally, do not change the setup value of this parameter while using.

### P113: V/F minimum voltage

V/F minimum voltage setup is relevant to start torque to a certain extend. Increasing the value of this parameter properly can increase the torque of starting, it can also cause over current. Generally, it's not necessary to change the value of P113.

## P114: V/F minimum frequency

V/F minimum frequency determines the initial point of V/F curve, it is the minimum value in V/F curve. Please refer to the following table for the specific Default setting of each model:

Model	P107	P108	P111	P115
IST210A-S04B	7	7	15	8
IST210A-S07B	8	8	14	8
IST210A-S15B	9	9	14	5
IST210A-T07B	8	8	27	8
IST210A-T15B	9	9	26	5
IST210A-T22B	10	10	25	5

P115	Carrier frequency		Fact	tory Setting
	Setting range	1–15	Unit	1

Carrier frequency decides the switching frequency of internal power module. The factory setting of inverters with different capacity are different because will affect motor noise, motor heating and disturbance.

Carrier frequency P115	Motor Noise	Motor Heating	Disturbance
Small → Big	Big → Small	Small → Big	Small → Big

Therefore, when the environment demands running without noise, you shall increase the value of P115, the maximum load of inverter will decrease. If motor is far from inverter, you shall lower the value of P115 so as to lower the leakage current between wires and wire to ground.

When the environment temperature or motor load is high, you shall lower the value of P115 to reduce the heating of the inverter. Refer to table in P114 for the factory set of P115.

Detailed Explanations of Functional Paramete	ations of Functional Parar	neters
--	----------------------------	--------

Attention: when inverter starts in tracing start mode, inverter will have speed tracing in the sequence of high to low frequency.

High current is likely in start, it is also possible to cause current.

Therefore, you need to have over current level setup (4.09 setup).

The specific value depends on the load.

In addition, when the value of 4.09 is too low, it may lead to a long start time. If over current in the speed tracing, inverter will pause the speed tracing.

P201	Stop mode selection			Initial value: 0	
	Setting range	0–1	Unit	1	
	Explanation	Deceleration to stop     Coasting stop			

You can choose a suitable stop mode according to the actual load

### 0: Deceleration to stop

Once inverter receives stop command, it will reduce the output frequency according to the deceleration time.

# Running frequency Shutdown frequency Free running shutdown Shutdown duration DC braking

With regard to stop mode after stop frequency is reached, you can choose DC injection brake and other options. If you do not choose DC injection braking, it will stop in coasting stop mode.

## 1:Coasting stop

When inverter receives stop command, it will stop frequency output and it will have free running with load until it stops.

P202	Start frequency setting		Ini	tial value: 0.5
	Setting range	0.10-10.00	Unit	0.01

P117	Initialization of parame	ters	Initial value: 0
	Setting range 0-8	Unit: 1	
	Explanation	8: Initialization of parameters	

When the parameter setup is not proper or when false running leads to improper setup of parameter, you can set P117 at 08 to restore all parameters to the Factory Setting, and then you can set them again according to actual need.

Attention: when locked up of parameters is valid, that is when P118=1, you cannot carry out initialization of parameters and change them. Please unlock first, and then set these parameters.

P118	Initialization of parame	eters	Initial value: 0
	Setting range 0-1	Unit: 1	
	Explanation	0: Unlocked	

### 1:Locked

You can lock the parameter by P118 to prevent unexpected change of the inverter setup.

When P118 is valid, all the other parameters except P100 (main frequency setting) cannot be changed.

# 8-3 Parameters of Basic Applications

P200	Start mode selection		Initial value:	
	Setting range	0–1	Unit	1
	Explanation	Start at start frequency     Tracing start		


There are two start modes for IST210A/IST220 series inverter. You can choose from the two by setup of parameter P200 and the condition of machinery.


### 0: Start at start frequency

Most loads do not have special requirement in start. Inverter output from the start frequency.

### 1:Tracing start

Tracing start is application for start after fault reset or instantaneous power failure. Using tracing start function, inverter can automatically detect the rotation speed and rotation direction of motor, the output the starting frequency and voltage accordingly.

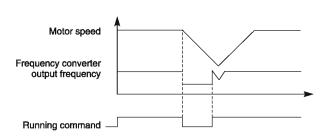


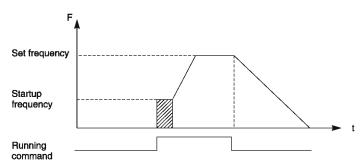

Start frequency is the initial frequency when inverter starts. For device with heavy load or requires large starting torque, increasing start frequency can make start easier. However, if the start frequency is too high, it may cause over current protection.

P203	Stop frequency setting	ng	Initial value: 0.5Hz	
	Setting range	0.10-10.00Hz	Unit	0.01Hz

When inverter receives stop command, it reduce the output frequency until the stop frequency, then it will start coasting stop or DC injection brake stop according to the setting.

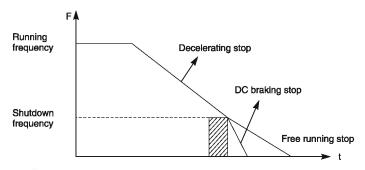


P204	DC braking current i	n start	Initia	al value: 100
	Setting range	0–150	Unit	1
P205	DC braking time in s	tart	Ir	nitial value: 0
	Setting range	0-250	Unit	1

DC braking in start is application for fan in stop mode and moving load. Because before inverter starts, motor is in free running mode and the rotation direction is unknown. It is easy to cause over current protection in start. Therefore, before start, you shall use DC injection brake to stop the motor in advance.

DC braking current in start is the ratio of rated current of inverter, adjusting P204 can have different braking torques. While setting value of parameter, you can adjust it from low to high until a sufficient braking torque is reached according to the actual load.

DC braking time is the period DC injection brake lasts. When it is 0, DC injection brake is invalid.

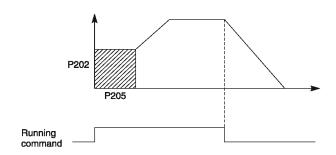

P206	DC braking current in	stop	Initia	l value: 100
	Setting range	0–150	Unit	1
P207	DC braking time in sto	pp	Ini	itial value: 0
	Setting range	0-250	Unit	1

DC braking in stop is application for load which has requirement on braking.

DC braking current in stop is the ratio of rated current of inverter. Adjusting this parameter can have different braking torques.


DC braking time in stop is the period DC injection brake mode lasts. When it is 0, DC injection brake is invalid.

Refer to the explanations of P203, P204 and P205 for relevant details.

P208	Torque boost		Initial value: 5%	
	Setting range	0.1–20%	Unit	0.1

Adjusting parameter P208 can increase voltage and obtain higher torque.

Attention: Too big setting may cause motor overheating. Increase the setting step by step until you get the requested starting torque.

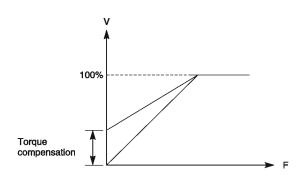

P209	Rated motor voltage		Initial val	ue: 380.00V
	Setting range	0-500.00	Unit	0.01
P210	Rated motor current		lı	nitial value: *
	Setting range		Unit	0.1
P211	No load current ratio of	of motor Initial value		tial value: 40
	Setting range	0–100	Unit	1
P212	Rated motor rotation s	peed	Initial	value: 1420
	Setting range	0-6000	Unit	1
P213	Number of motor poles	•	Ir	nitial value: 4
	Setting range	0–10	Unit	1
P214	Rated motor slip		Initial valu	
	Setting range	0–100	Unit	0.1

Please set above parameters according to the motor rating.

P209 Rated voltage motor

Please set rated voltage of motor according to voltage value on motor nameplate.

P210 Rated motor current

Please set rated current of motor according to the current value on nameplate. If the running current exceeds the value of rated current, inverter will trip to protect the motor.

P211 No load current ratio of motor

The value of rated no load current of motor can affect slip compensation. Rated no load current is the percentage of motor current.

P212 Rated motor rotation speed

The value of parameter P112 is the rotation speed at 50Hz. It is related to rotation speed display. Generally, it shall be set according to the value on nameplate.

To display the actual rotation speed of motor, you can set parameter P212 at the actual rotation speed at 50Hz.

P213 Number of motor poles

Set the number of pole pairs of motor by adjusting this parameter according to the value on nameplate

P214 Rated motor slip

When inverter drives motor, slip will increase when load increase.

Adjusting P214 can compensation the slip and make motor speed close to the synchronization speed.

P215	Rated motor frequence	Rated motor frequency		value: 50Hz	
	Setting range	0.00-400.00	Unit	1	
P216	Resistance of stator		In	Initial value: 0	
	Setting range	0-100.00	Unit	1	
P217	Resistance of rotor	Resistance of rotor		itial value: 0	
	Setting range	0-100.00	Unit	0.1	

P218	Self inductance of ro	otor	I	nitial value: 0
	Setting range	0-1.000	Unit	0.001
P219	Mutual inductance o	f rotor	ı	nitial value: 0
	Setting range	0-1.000	Unit	0.001

The above parameters are parameters of motor.

P215 Rated frequency of motor

Please set rated frequency of motor according to motor nameplate

P216 Resistance of stator

P217 Resistance of rotor

P218 Self inductance of rotor

P219 Mutual inductance of rotor

Set the above parameters according to the actual condition of motor.

# 8-4 Parameters for Input and Output Application

P300	FIV minimum voltage input		Ir	nitial value: 0
	Setting range	0~FIV maximum voltage input	Unit	0.1
P301	FIV maximum voltage input		Initia	l value: 10.0
	Setting range	FIV minimum voltage input~0	Unit	0.1
P302	FIV input filter time		Init	ial value: 1.0
	Setting range	0–25.0	Unit	1

P300 FIV minimum voltage input

FIV minimum voltage input value is related to frequency of lowest analogue input. Voltage command below this value is deemed as invalid command.

P301 FIV maximum voltage input

FIV maximum voltage input value is related to frequency of highest analogue input. For voltage higher than this value, the machine will still operate at this value.

The value of P300 and that of P301 decide the range of input voltage.

P302 Input filter time

Value of input filter time decides the response speed of inverter to analogue change. With the increase of value of P302, the inverter will get slower for responding to analogue change.

P303	FIC minimum current input		Initial value: 0	
	Setting range	0~FIC maximum current input	Unit	0.1
P304	FIC maximum current input		Initial value: 20.0	
	Setting range	FIC minimum current input-20.0	Unit	0.1

P305	FIC input filter time		Initial value: 1.0	
	Setting range	0–25.0	Unit	0.1

**Detailed Explanations of Functional Parameters** 

P303: FIC minimum current input

FIC minimum current input is related to frequency of lowest analogue input. Inverter will deem current signal below value of P303 as invalid.

P304: FIC maximum current input

FIC maximum current input is related to frequency of highest analogue input. For current command higher than value of P304, inverter will operate at the value.


P305: FIC input filter time

FIC input filter time decides how fast inverter responds to analogue change. With the increase of value of P305, inverter will respond more and more slowly to analogue change. The output of inverter will be relatively stable.

Refer to explanations of P300 to P302 for relevant parameters.

If the external input is voltage signal, refer to P300-P302. If the external input is current signal, refer to P303-P305.

For example, if the output signal of upper computer is 4–20mA, the corresponding frequency shall be within the range of 0–50Hz.

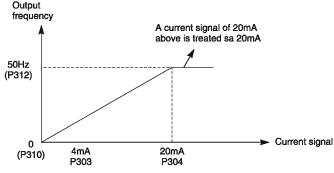

Parameters: P303=4 P304=20 P310=0 P312=50


P306	FOV minimum voltage output		lı	Initial value: 0	
	Setting range	0-FOV maximum voltage output	Unit 0.1		
P307	FOV maximum voltage output		Initial value: 10.0		
	Setting range	FOV minimum voltage output-10.0	Unit	0.1	

The value of P306 and that of P307 decide the range of output voltage of FOV terminal.

P306 FOV minimum voltage output is related to frequency of lowest analogue output.

P307 FOV maximum voltage output is related to frequency of highest analogue output. You can connect voltmeters of various measurement ranges by setting parameter P306 and P307.

For example, use a frequency meter with input voltage of 0-5V and measurement range of 0-50Hz to monitor the output frequency of inverter.

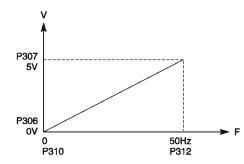

Then you need to set them like the following: P306-P307=5.

P308	FOC minimum current output		Initial value: 0		
	Setting range 0–FOC maximum current output		Unit 0.1		
P309	FOC maximum curre	FOC maximum current output		Initial value: 20.0	
	Setting range FOC minimum current output-20.0		Unit	0.1	

P308 and P309 decides the range of output current of FOC terminal.

P308 and P309 correspond to frequency of lowest analogue output and frequency of highest analogue output respectively. Refer to explanations of P306 and P307 for relevant parameters.

P310	Frequency of low and	alog	Initia	Initial value: 0.0	
	Setting range	0.0-600.00	Unit	0.01	
P311	Direction of of low ar	nalog	Ir	Initial value: 0	
	Setting range	0–1	Unit	1	
	Explanation	Positive direction     Negative direction			
P312	Frequency of high ar	nalog	Ini	tial value: 50	
	Setting range	0.0-600.00	Unit	0.01	
P313	Direction of high ana	log	Ir	nitial value: (	
	Setting range	0–1	Unit	1	
	Explanation	Positive direction     Negative direction			
P314	Analogue reverse op	itions	Ir	nitial value: (	
	Setting range	0–1	Unit	1	
	Explanation	0: No reverse at negative 1: Reverse allowed at neg	-		

The parameter group of P310-P314 decides the running condition of analogue, including output frequency and direction. According to actual need of user, they can form various control curves.

P310 Frequency of low analog

Frequency of lower analogue decides the output frequency of lowest analogue input, corresponding to analogue minimum voltage (current) input.

P311 Direction of low analog

Direction of lower analogue decides the running condition at low frequency, whether it is Forward or reverse.

P312 Frequency of high analog

Analogue high-end frequency determines high-end output frequency, and is corresponding to analogue maximum voltage (current) input.


P313 Direction of high analog

Analogue high-end direction determines whether the running status of high-end frequency is forward or reverse.

P314 Analog input reverse selection

Analogue reverse selection determines running status of analog negative bias voltage, satisfied curve needed by customer can be constituted by using above parameter.

Example 1:upper computer output 2-10 V signal to control inverter, 50Hz reverse to 50Hz forward running.

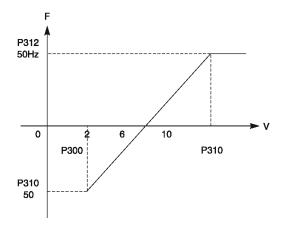

Introduction: P300=2 FIV minimum voltage input: 2V (inverter regards signals below 2V as invalid signals);

P301=10 FIV maximum voltage input: 10V (signals over 10V are regarded and handled as 10V);

P310=50 Analogue low-end frequency: 50Hz;


P311=1 Analogue low-end direction: 1 (reverse);

P312=50 Analogue high-end frequency: 50Hz;

P313=0 Analogue high-end direction: 0 (Forward);


P314=1 Analogue reverse selection: 1 (negative bias voltage can be reversed).

Attention: In various curves, switching instructions of forward and reverse remain effective, when forward and reverse are switched, the curve will be reversed, and the diagram of curve is as follows:

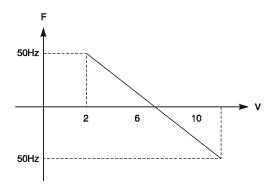

**Detailed Explanations of Functional Parameters** 

Example 2, upper computer output 4-20mA, and controls running of inverter Output frequency is 100Hz~0Hz

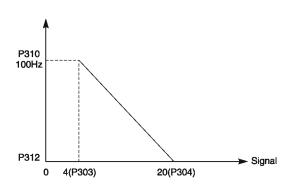

Parameter: P33=4 FIC minimum current input

P304=20 FIC maximum current input

P310=100.00 analogue low-end frequency

P311=0 analogue low-end direction (Forward)

P312=0 analogue high-end frequency

P314=0 analogue high-end direction (Forward)

Special inverted curve can be constituted by using P310-P314.

Introduction: signal input below 4mA is regarded as invalid signal by inverter.

P315

P316

P317

P318

P319

P320

P321

P322

Range

Settings

Default value 7

**Detailed Explanations of Functional Parameters** 

Default value 1

Default value 6

Default value 18

Default value 15

Default value 16

1

Default value 8

Default value 9

Multifunction input terminal---S6 terminal 0-32 Unit

0: Invalid

Multifunction input terminal---FWD terminal

Multifunction input terminal----REV terminal

Multifunction input terminal---S1 terminal

Multifunction input terminal---S2 terminal

Multifunction input terminal---S3 terminal

Multifunction input terminal---S4 terminal

Multifunction input terminal---S5 terminal

1: Jog

2: Jog Forward

3: Jog reverse

4: Forward/ reverse

5: Running

6: Forward

7: Reverse

8: Stop

9: Multi-speed selection 1

10: Multi-speed selection 2

11: Multi-speed selection 3

12: Multi-speed selection 4

13: Acceleration/ deceleration selection 1

14: Acceleration/ deceleration selection 2

15: Frequency increasing signal Up

16: Frequency decreasing signal Down

17: Coasting stop

18: Fault reset

19: PID function enable

20: PLC function enable

21: Timer 1 start up

22: Timer 2 start up

23: Counter pulse input

24: Counter reset

25: PLC memory clear

26: Winding operation start

0: Invalid

Set as empty terminal, no function

Set as JOG (inching), usually used in trial running, common inching is operated by 5Hz,

2: Jog Forward


Set as JOG forward.

3: Jog reverse

Set as JOG reverse.

4: Forward/ reverse

Set as forward/ reverse switching, when the terminal is defined to be valid, running status reverse.

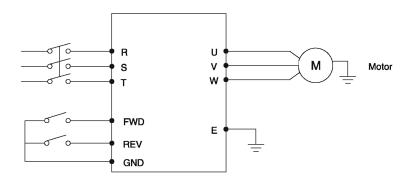

# Parameter: P102=1, P315=6, P316=4

Termina	Running condition	
FWD REV		Halling condition
ON	OFF	Forward
ON	ON	Reverse
OFF	OFF	Stop

5: Running

Set terminal as running signal.

6: Forward

When terminal is valid, motor run forward.

7: Reverse

When terminal is valid, motor run reverse.

8: Stop

When terminal is valid, motor run reverse.

9: Multi-speed 1

10: Multi-speed 2

11: Multi-speed 3

12: Multi-speed 4

15-speed can be selected by terminal multi-speed 1, 2, 3 and 4 as below table:

	Multi-funct			
Multi-speed 1	Multi-speed 2	Multi-speed 3	Multi-speed 4	Status and explanation
0	ō	0	0	Primary frequency, Primary frequency is determined by P100 or potentiometer
1	0	0	0	Multi-speed 1 (P503)
0	1	0	0	Multi-speed 2 (P504)
0	0	1	0	Multi-speed 3 (P505)
0	0	0	1	Multi-speed 4 (P506)
1	1	0	0	Multi-speed 5 (P507)
1	0	1	0	Multi-speed 6 (P508)
1	0	0	1	Multi-speed 7 (P509)
0	1	1	0	Multi-speed 8 (P510)
0	1	0	1	Multi-speed 9 (P511)
0	0	1	1	Multi-speed 10 (P512)
1	1	1	0	Multi-speed 11 (P513)
1	1	0	1	Multi-speed 12 (P514)
1	0	1	1	Multi-speed 13 (P515)
0	1	1	1	Multi-speed 14 (P516)
1	1	1	1	Multi-speed 15 (P517)

Remarks: 0: terminal invalid 1: terminal invalid

13: acceleration/deceleration selection 1

14: acceleration/deceleration selection 2

4 kinds of acceleration/deceleration times can be selected by acceleration/deceleration selection terminal 1 and 2.

Multi-function terminal  Acceleration/ Acceleration/ deceleration deceleration selection 1 selection 2		
		Acceleration/deceleration statu and result
0	o	Acceleration/ deceleration time 1 (P107, P108)
1	0	Acceleration/ deceleration time 2 (P401, P402)
0	1	Acceleration/ deceleration time 3 (P403, P404)
1	1	Acceleration/ deceleration time 4 (P405, P406)


### 15: Frequency increasing signal (Up signal)

When this terminal is valid, the frequency increases at a constant speed, until operative frequency is highest.

16: Frequency decreasing signal (Down signal)

**Detailed Explanations of Functional Parameters** 

When this terminal is valid, the frequency decreases at a constant speed, until operative frequency is lowest. Attention: Inverter will not memorize the frequency setting changed by "UP" and "DOWN" signal. When power is turned off and reset again, inverter still memorizes the set value in P100.

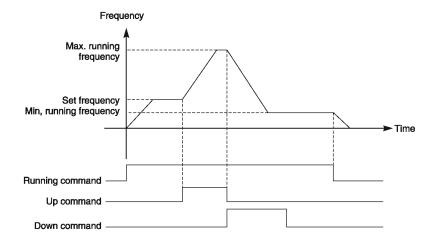

# 17: Coasting stop

When this terminal is valid, inverter coasting to stop.

18: Fault reset

Reset the inverter when alarm occurs, this terminal function is same to that of the RESET key on the Keypad.

19: PID function enable

When this contact closes, PID function is enabled. When P601 is set as 2, PID is invalid when this contact is disconnected.

20: PLC function enable

When this contact closes, PLC function starts up, and corresponding PLC function opens.

21: Timer 1 starts up

22: Timer 2 starts up


When this contact closes, timer starts up and begins timing, when the timer reaches set value, corresponding multifunction output contacting action.

23: Counter pulse input

This terminal may accept pulse signals of no more than 250 Hz.


24: Counter resetting

The counted values may be reset and cleared through this terminal.

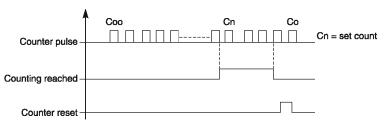


# 25: PLC memory removal

In the running process of PLC program, owing to fault or stopping, inverter will record status of the program automatically, after the fault is cured and the inverter is switched on again, the inverter will continue running according to the program, when memory removal is valid, program may be reset, and inverter operates from the beginning.

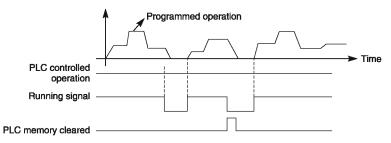

### 26: Winding function enable

When this signal is valid, winding function is enabled.

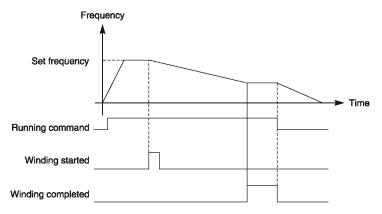

### Introduction:

- ① Winding function is activated, and winding begins;
- ② Winding operation complete, inverter output according to the frequency that winding is completed. The multifunction terminal output the winding complete signal;
- 3 Inverter stops, the winding complete signal reset.

P323	Output terminal M01		Output terminal M01		Output terminal M01		Def	ault value 01
P324	Output terminal M02		Default value 02					
P325	Output terminal RA, RB, RC		Def	ault value 03				
	Range	0–32	Unit	1				

0: Invalid 1: In running 2: Frequency reached 3: In fault 4: Zero-speed 5: Frequency 1 reached 6: Frequency 2 reached 7: Accelerating 8: Decelerating 9: Under voltage 10: Timer 1 reached 11: Timer 2 reached 12: Indication for completion of phase 13: Indication for completion of procedure 14: PID upper limit 15: PID lower limit 16: 4–20mA cable open 17: Overload 18: Over torque 26: Winding function complete 27: Counter reached	Range	0–32	Unit	1
26. Intermediate counter reached	Settings	1: In running 2: Frequency reached 3: In fault 4: Zero-speed 5: Frequency 1 reached 6: Frequency 2 reached 7: Accelerating 8: Decelerating 9: Under voltage 10: Timer 1 reached 11: Timer 2 reached 12: Indication for completion of 13: Indication for completion of 14: PID upper limit 15: PID lower limit 16: 4–20mA cable open 17: Overload 18: Over torque 26: Winding function complete	procedure	

### 0: Invalid

Set as invalid terminal, prevent false operation.

### 1 .In running

Terminal is defined to be in running, when inverter is output, this terminal is ON.

# 2. Frequency reached

When frequency arrives at setting value, this contact is ON

### 3. In fault


When inverter detects abnormal existing, this contact is ON.

### 4. Zero-speed

When frequency output by inverter is less than start-up frequency, this contact is ON.

- 5. Frequency 1 reached
- 6. frequency 2 reached

When frequency arrives at setting value, this contact is ON.

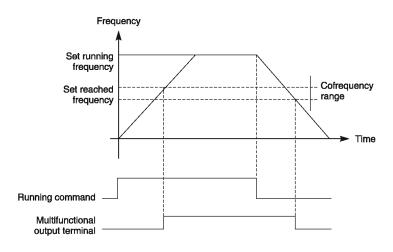


### 7: Accelerating

When inverter is in the status of accelerating, this contact is ON.

#### 8: Decelerating

When inverter is in the status of decelerating, this contact is ON.

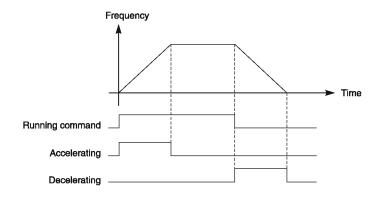

### 9: Under voltage alarming

When inverter detects that DC bus voltage is lower than setting value, this contact is ON and alarm. Under voltage alarming setting value can be changed through advanced application parameter group.


10: Timer 1 reached

11: Timer 2 reached

When inverter arrives at setting value, this contact is ON, when timer start-up signal is removed, this contact is reset.

12: Stage completion indication

In the PLC operation mode, inverter output this pulse signal when inverter finished a section of program.

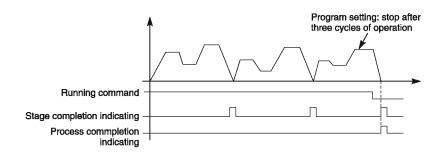

### 13: Process completion indication

In the PLC operation mode, inverter output this pulse signal when inverter finished the entire program.

14: PID upper limit

When PID feedback quantity exceeds setting value of upper limit, this contact is ON.

15: PID lower limit

When PID feedback quantity is lower than setting value, this contact is ON.

16: 4-20mA cable open

When FIC input signal is disconnected, this contact is ON and alarms.

17: Overload detection

When inverter detects that motor overloads, this contact is ON.

18: Over torque detection

When inverter detects over torque, this contact is ON.

26: Winding function complete

When winding function is complete, this contact is ON. When inverter stops, this contact is reset.

27: Set counter reached

When inverter implements external counter, and when count value arrives at setting value (P425), this contact is ON.

28: Middle counter reached

When inverter counts, if count value arrives at setting value (P426), this contact is ON.

P326	Output terminal FOV		Default value 0	
	Setting range	0–7	Unit	1
P327	Output terminal FOC		De	fault value 1
	Setting	Output frequency     Output current     Direct voltage     Alternating voltage		

### P326 output terminal FOV

FOV terminal may output 0-10V voltage, output may be setting in range of 0-10V through P306 and P307 and being corresponding to output frequency, output current, direct voltage, alternating voltage and so on. P327 output terminal FOC

FOC terminal may output 0-20m current, output range may be setting by P308 and P309 and being corresponding to output frequency, output current, direct voltage, alternating voltage and so on.

0: Output frequency:

Current (voltage) output is corresponding to Min. output frequency-max. frequency.

1:Output current

Current (voltage) output is corresponding to 0~2 x inverter rated current.

2: Direct voltage


Current (voltage) output is corresponding to 0~1000V.

3: Alternating voltage

Current (voltage) output is corresponding to 0~510V.

For example: select a frequency meter of 0-5V, supervise output frequency, setting the Min. output frequency of inverter as 0.00Hz the highest output frequency is 80Hz.

Then:

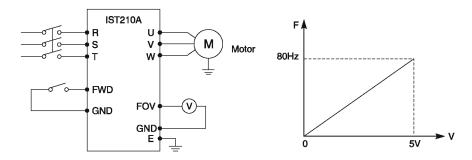

Parameter: P105=80.00 Max. frequency

P106=0.00 Min. output frequency

P306=0.00 FOV minimum voltage output

P307=5.00 FOV maximum voltage output

# 8-5 Secondary Application Group

P400	Jog frequency setting	og frequency setting		Default value 5.00	
	Range	0.00max. frequency	Unit	0.01	

Jog frequency setting is usually applied to trial run. This function can only be through external terminal. When JOG function is achieved, other instruction is invalid. When JOG signal is open, inverter decelerate to stop, JOG acceleration/deceleration time is set in the 4th acceleration/ deceleration parameter. Control priority level:

 $Jog \rightarrow external multi-speed \rightarrow PLC operation means \rightarrow PID means \rightarrow triangle wave (traverse function) \rightarrow winding \rightarrow frequency conversion setting means.$ 

P401	Acceleration time 2		Defa	ult value 10.0
P402	Decelerate time 2		Defa	ult value 10.0
P403	Acceleration time 3		Defa	ult value 20.0
P404	Decelerate time 3		Defa	ult value 20.0
P405	Acceleration time 4		Defa	ault value 2.0
P406	Decelerate time 4		Def	ault value 2.0
	Range	0-999.9s	Unit	0.1

IST210A/IST220 series inverters can set 4 acceleration/deceleration time. For normal operation, the default selection is the acceleration/deceleration time 1. For JOG operation, the default selection is acceleration /deceleration time 4.


P407	Setting value of	counter	Defa	ult value 100	
P408	Middle value of	counter	Defa	Default value 50	
	Range	0-999.9s	Unit	1	

IST210A/IST220 series inverter designs 2 groups of counters, pulse signal less than 250Hz can be accepted through multi-function terminal, when count value reaches setting value, corresponding multi-function output terminal is ON, input terminal of counter resets signal through counter, counter resets and begins counting again.

P409	Acceleration toro	que limiting level	Default value 150	
	Range	0–200	Unit	1

Parameter P409 is the torque limit level during acceleration.


When output current reaches the setting value, inverter will stop accelerating, and when current is below the set value, inverter resume the accelerating.

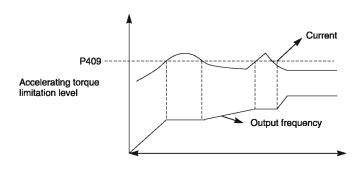

100% current is the rated current of inverter, when P409 is set to be 0, then accelerating torque limit is invalid, and it does not have protecting function.

P410	Constant-speed	torque limiting level	Defa	ult value 00
	Range	0–200	Unit	1

Parameter P409 is the torque limit level during constant speed. When output current reaches the setting value, inverter automatically reduce the output frequency in order to reduce the load. When the output current drops, inverter increase output frequency to the setting (100% current is rated current of inverter). When P410 is set to be 0, constant—speed torque limiting level is invalid and cannot protect.

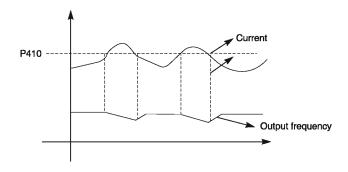


P411	Deceleration over-vol	tage prevention selection	Default value 1
	Range	0–1	Unit
	Settings	0: Invalid 1: Valid	

#### 0: Invalid

During deceleration, the DC-bus voltage may increase, when over-voltage prevention selection is invalid, inverter may trip for over voltage.

## 1:Valid

During deceleration, when DC-bus voltage reaches the setting value, inverter will stop the deceleration procedure. When DC-bus voltage returns to allowable value, inverter will resume the deceleration.

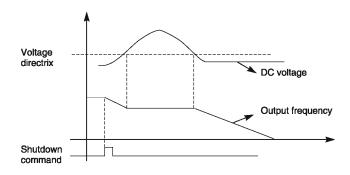

P412	Automatic voltage regulation selection		Default value	
	Range	0–2	Unit	4
	Settings	0: Invalid 1: Valid 2: Invalid when decelerating		

If the input voltage is not stable, temperature of the machinery will increase, insulation may be damaged, and output torque will be instable.

### 0: Invalid

Select automatic voltage regulation to be invalid, inverter output voltage fluctuates.

1: Automatic voltage regulation is valid.

Automatic voltage regulation function is selected, and under the condition that input electric source is instable, inverter output stable voltage automatically.


2: Invalid when decelerating: when this function is selected, braking function of inverter can be strengthened.

P413	Automatic energy-sav	Automatic energy-saving selection		Default value 0.0	
	Range	0–100	Unit	1	
P414	DC Braking voltage Default value: 650V fo	r S900–4T/375V for S900–2S			
	Range	S900-4T series: 650V-800V S900-2S series: 360V-400V	Unit	1	
P415	Braking duty		Defa	ult value: 50	
	Range	40–100	Unit	1	

# P413 Automatic energy-saving selection

In constant-speed running of automatic energy-saving selection, best voltage value may be calculated by loading condition and provided to load, in order to achieve best energy-saving.

Attention: for running that load changes frequently or is almost at full load. this function is not suitable.

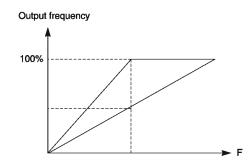


P414 and P415 are only useful for inverter with built-in braking units, and are invalid for inverter with external braking units.

The two parameters adjust internal DC braking voltage level and braking ratio of inverter.

### P414 DC Braking voltage

When inverter DC high voltage is higher than set value of P414, built-in braking unit is ON. Energy is released through braking resistor, then DC voltage falls back, when DC voltage falls to a certain value, built-in braking unit stop.

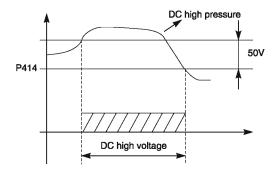

If P414 is too high, DC voltage may be too high and may cause inverter protection.

If P414 is too low, braking resistor maybe too hot.

## P415 Braking duty

This parameter decides the working duty of the braking resistor.

Higher duty needs high power of braking resistor.

P416	Restart after insta	Restart after instant power off		Default value 0	
	Range	0–1	Unit	1	
	Settings	Invalid: no restart after instant power failure     Valid: frequency tracing start-up			


#### 0: Invalid

Inverter clears the running command after power failure. After power is recovered, inverter will not start automatically.

### 1: Frequency tracing enable

When power is shut-off in short time, inverter keeps the running command as effective. When power is recovered in time, inverter will tracing the motor speed and resume output.

Attention: when instant power failure restarting is enabled, inverter may start the motor automatically. Please take care of the safety when use this function.

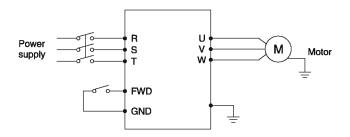

#### Example:

Use K1 (FWD), control running of inverter.


K1 closes, frequency conversion operates, when K1 is cut off, inverter stops. When power is shut off and K1 remains closed, if power is on, inverter starts up suddenly and it may be very dangerous. Please use other control methods, such as three–wire system connection method.

P417	Allowable time of pow	er off	Defa	ault value 5.0
	Range	0–10.0	Unit	0.1

P417 sets allowable time of power failure, if time of power failure exceeds set value, power failure restart is invalid.

P418	Flank restart curr	rent limiting level	Default valu	
	Range	0-200	Unit	1

When inverter implements flying restart, inverter tracing downwards from setting frequency by highest speed, output current of inverter increases relatively rapid and may exceeds protection unit setting by inverter, at this time, inverter stops tracing, and output current of inverter falls back to common, inverter continues tracing, setting value 100% of this parameter is rated current of inverter, and protection unit when inverter searching may be set through P418.

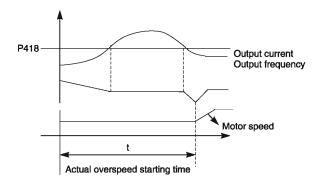

P419	Flank restart tim	е	Default value 5
	Range	0–10	Unit

When inverter enabled the flying restart function, inverter tracing motor speed downwards within the setting time. If it is not completed within setting time, inverter protects.

In above example, when t value>P419 setting value, inverter protects.

P420	Fault restart time	Fault restart times		ault value 0
	Range	0–5	Unit	1
P421	Delay time for re	Delay time for restart after fault		ault value 2
	Range	0–100	Unit	1

After alarm (such as current, over-voltage and so on) occurs, inverter resets automatically (valid when non-zero as set by P420), after the period of time set by P421, inverter starts up according to setting start-up means (P200).

After start-up, if no alarm happens within 60 seconds, inverter resets P420 automatically, after start-up, if alarm happens again within 60 seconds, inverter records number of alarms, and when number of alarms reaches set value of P420, inverter stops output.


Attention: If P420=0. fault restart is invalid.

When fault restart function is valid, motor may start suddenly, so when this function is used, please pay attention to safety.

P422	Over torque action	Over torque action Defau		
	Range	0–3	Unit	1
	Settings	speed, inverter con 1: Inverter start detec speed, inverter stop 2: Inverter always det continues operation	ting over torque only in co attinues operation during ov ting over torque only in co p during over torque ecting over torque, inverte a during over torque, ecting over torque, inverte rque	er torque nstant er


P423	Over torque detection level			Default 0
	Range	0–200%	Minimum	1
P424	Over torque detect	ion time		Default 0
	Range	0-200s	Minimum	1

When output current of inverter exceeds setting value of P423, inverter start calculate the over torque time. When the duration exceeds half of setting value of P424, inverter output pre–alarm signal. Inverter continues output until the over torque time exceeds P424 setting, and then inverter protects and output alarm signal. If P423=0. over torque detection is invalid, and 100% is inverter rated current.

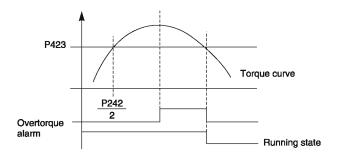

P425	Reaching frequency 1		Defa	ult value 100
	Range	0-Max. frequency	Unit	0.1
P426	Reaching frequency	12	Defa	ult value 5.0
	Range	0-Max. frequency	Unit	0.1

IST210A/IST220 series sets two groups of frequencies arrive, when output frequency arrive the setting value of P425 and P426, corresponding multi-function output terminal is ON. Frequency arrive width is of a hysteresis loop, which is set by P430.

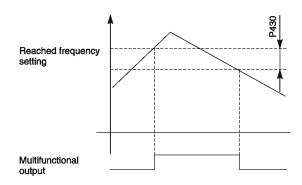

P427	No.1 timer		De	fault value 0
	Range	0.0-999.9s	Unit	0.1
P428	No.2 timer		De	fault value 0
	Range	0.0-999.9s	Unit	0.1

IST210A/IST220 series have two timers, when time of the timers reaches setting value (set by P427 and P428), corresponding multi-function terminal is ON.

Timer start is controlled by external multi-function input terminal.

Some simple program may be made by using these two timers.

P429	Constant-speed	Constant-speed torque limiting time		Default value 0.50	
	Range	0-999.9s	Unit	0.1	


P430	Width of arrive of Default value 0.5	f frequency in hqsteretic loop 0		
	Range	0.00-2.00	Unit	0.01

This parameter sets frequency reached width, for details, refer to P425-F426 introductions.

P431	Jump Frequency 1		De	efault value C
	Range	0.0-frequency upper limit	Unit	0.01
P432	Jump Frequency 2		De	efault value (
	Range	0.0-frequency upper limit	Unit	0.01
P433	Jump frequency hyster	esis loop width	Defa	ult value 0.50
	Range	0.0-2.0	Unit	0.01

If machine resonance occurred at a certain frequency, we can use the frequency jump function to skip the resonance point.

IST210A/IST220 support 2 jump frequencies by parameter P431 and P432. Frequency jump hysteresis loop width can be set through P433 as below:

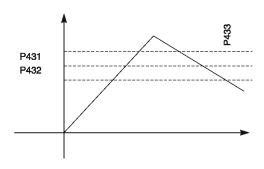

# 8-6 Special Operation (PLC Control)

P500	PLC memory mode		In	itial value: 0
	Range	0–1	Unit	1
	Content	0: Do not remember 1: Remember		

#### 0: Do not remember

In the operational process of PLC program, P500 will choose not to remember. When machinery stops because of fault or other reasons, inverter will not remember status before the stopping. After restart, running begins from initial state.

#### 1:Remember

In the running of PLC program, P500 will select to remember. When it stops because of fault or other reasons, inverter will remember status before stopping. After restart, inverter will continue operating according to program. Attention: power cannot be cut off.

Stop, power cut and power on, inverter will not remember status before power cut off. After restarting, inverter will run according to initial state of program.

P501	PLC start mode		In	itial value: 0
	Range	0–1	Unit	ব
	Content	0: Invalid (PLC can not start) 1: Valid (PLC start)		

P501 determines PLC start mode of inverter.

P501=0, means PLC is invalid. The inverter is operated by common mode.

When P501=1, PLC will start. The inverter select PLC program to run.


Under the status of PLC start, when various running orders and programs, inverter will choose the highest level to run according to priority level.

Precedence level	Priority level	Item
	1	Jog
	2	External multi-speed
	3	Internal multi-speed
$High \to low$	4	PID
	5	Triangular wave
	6	Winding
	7	Inverter setting mode

P502	PLC running mode		Ini	itial value: 0
	Range	0–4	Unit	্ব
	Content	2: PLC cycle running 3: Cycle running of Pl 4: After running for a	stop running after a week  LC pause mode	

PLC running mode determines running status of internal multi-speed, either running one circle or cycle running. P502 is only valid when PLC starts up.

PLC pause mode means that when completing every speed in the running process of internal multi-speed, the speed will be down, stop, and accelerate to the next speed. The illustration is as below:

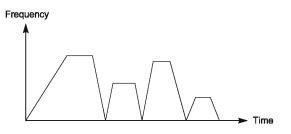

Users may select proper running mode according to actual conditions.

P517	Multi-speed 15 Setting range	0.00 —— Max. frequency	Initial Unit	0.01
P516	Multi-speed 14			value: 10.0
P515	Multi-speed 13		Initial	value: 10.0
P514	Multi-speed 12		Initial	value: 10.0
P513	Multi-speed 11		Initial	value: 10.
P512	Multi-speed 10		Initial	value: 10.
P511	Multi-speed 9		Initial	value: 50.
P510	Multi-speed 8		Initial	value: 45.
P509	Multi-speed 7		Initial	value: 40.
P508	Multi-speed 6		Initial	value: 35.
P507	Multi-speed 5		Initial	value: 30.
P506	Multi-speed 4		Initial	value: 25.
P505	Multi-speed 3		Initial	value: 20.
P504	Multi-speed 2		Initial	value: 15.
P503	Multi-speed 1		Initial	value: 10.

P503 —— P517 are set of 15 speed of rated frequency in the running. Regarding relationship multi speed and external terminal please refer to rated instruction 1,2,3,4 of multifunctional terminal.

P518	PLC operation time 1	Initial value: 100
P519	PLC operation time 1	Initial value: 100
P520	PLC operation time 3	Initial value: 100
P521	PLC operation time 4	Initial value: 100
P522	PLC operation time 5	Initial value: 100
P523	PLC operation time 6	Initial value: 0
P524	PLC operation time 7	Initial value: 0
P525	PLC operation time 8	Initial value: 0
P526	PLC operation time 9	Initial value: 0
P527	PLC operation time 10	Initial value: 0
P528	PLC operation time 11	Initial value: 0

P529	PLC operation time	12	Ini	itial value: 0
P530	PLC operation time	13	Ini	itial value: 0
P531	PLC operation time	14	Ini	itial value: 0
P532	PLC operation time	15	Ini	itial value: 0
	Setting range	0-999.9s	Unit	1

PLC operation time determines internal controlling varying rated running duration for each segment, and the running duration for each segment is corresponding to its rate.

P533	PLC operation time 15		Initial value	
	Setting range	0-32767	Unit	1


P533 setting running direction of each segment Method of setting running direction:

The way of setting running direction: by means of 16-bit binary system, and then transfer to decimal system value; every bit decides the corresponding running direction: 0 is running forward and 1 is running backward, and this parameter is only valid when the PLC is on.

For example: there is a five-segment rate, the circling running is required as follow:

Items	Output frequency	Running direction	Running duration
Dominant frequency	Potentiometer is adjustable	Forward	
Segment 1	20.0	Reverse	20
Segment 2	60.0	Forward	25
Segment 3	40.0	Reverse	30
Segment 4	15.0	Forward	20

Two buttons, one is for running, the other one is for ceasing; the main frequency requires adjustable potentiometer.

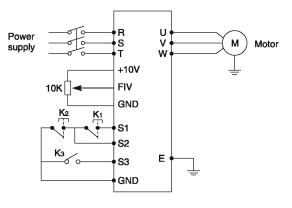

(1) Connection illustration

(2) Parameter setting


PLC operation direction setting: (P533 setting)

Rate of segment 1	Rate of segment 2	Rate of segment 3	Rate of segment 4	Dominant frequency	
4	3	2	1	0	→ position (bit)
0	1	0	1	0	→ run direction <0 is forward, 1 is Reverse
0×24	1 × 23	0×22	1 x 21	0×20	→ transfer to decimal system

The binary system number 01010 is transferred to decimal system number: 1 x21+1 x23+8=10 Define to: P533=10


The parameter defines to:

P101=3	(Keyboard potentiometer setting mode:	P501=1	PLC is on
	dominant frequency is controlled by	P502=0	PLC operation one circle and then
	potentiometer)		ceasing
P102=2	(Running setting option:	P503=1	Segment 1 rated 20Hz
	Multifunction end input)	P504=60	Segment 1 rated 60Hz
P105=60	(The max. frequency is 60HZ)	P505=40	Segment 1 rated 40Hz
P107=10	P108=10	P506=15	Segment 1 rated 15Hz
	(acceleration/deceleration time 10S)	P518=10	Segment 1 rated running duration is 10s
P314=6	(S1 end is running forward)	P519=20	Segment 1 rated running duration is 20s
P318=8	(S2 end is ceasing)	P520=25	Segment 1 rated running duration is 25s
P319=20	S3 end is PLC starting to running	P521=30	Segment 1 rated running duration is 30s
P500=1	PLC programming memory		

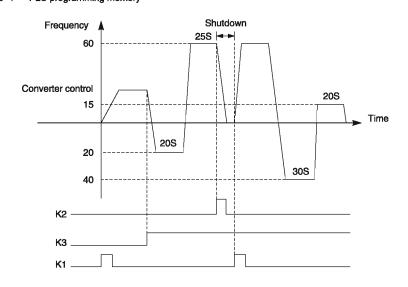

Action instruction: ① Press K1 to startup the inverter and the potentiometer will set output frequency.

- ② Press K3, PLC to startup, and from the segment 1 PLC program running one circle and then ceasing
- ③ If the program is running, press K3, or if there is a fault, and the inverter is ceasing, when the fault is solved, press K1 and the inverter will running forward as the program.
- (4) If P500 is 1 and the program is not memory, so the running will start from the very beginning.

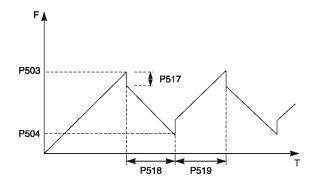

# 8-7 Special Operation (PID Control)

The inverter can be used to exercise process control, e.g. flow rate air volume or pressue.

The terminal FIV/FIC input signal or parameter setting is used as a set point and the terminal FIV/FIC input signal also can used as a feedback value to constitute a feedback system for PID control.

P600	PID starting mode		lr	itial value: 0
	Setting range	0–1	Unit	1
	Content	0: PID disable 1: PID start 2: PID start by externa	ıl terminal	

0: PID disable

PID can not use.

1:PID start

PID is working despite the external signal input, and keeps being valid without external input.

2: PID starts up on condition; PID will start when certain external input is ON.

P601	PID operation mode	n mode selection Initial		
	Setting range	0–1	Unit	1
	Content	0: Negative feedback mode 1: Positive feedback mode		

0: Negative feedback mode

If feedback value(P603)>setting value(P602), inverter decrease output frequency

If feedback value(P603)<setting value(P602), inverter increase output frequency

1:Positive feedback mode

If feedback value(P603)>setting value(P602), inverter decrease output frequency

If feedback value(P603)<setting value(P602), inverter increase output frequency

P602	PID action set point		In	Initial value: 0	
	Setting range	0–2	Unit	1	
	Content	0: figure mode (P604) 1: FIV 2: FIC			

0: Select figure mode as the set point (P604)

Set the set value (P604) from the operation panel or parameter unit.

1:FIV

Terminal FIV input is the set point (0-10DCV).

2: FIC.

Terminal FIC input is the set point (0-20mA).

P603	PID feedback value	selection	In	itial value: (
	Setting range	0–3	Unit	1
	Content	0: FIV 1: FIC		
		2: FIV-FIC		

3: FIC-FIV

Notes:P603 parameter setting: Select PID feedback channel

0: FIV

Input the signal from the detector (measured value signal (0-10DCV))

1: FIC

Input the signal from the detector (measured value signal (0-20mA))

2: FIV-FIC

Input the signal from the detector (measured value signal)

3: FIC-FIV

Input the signal from the detector (measured value signal)

P604	PID figure target value setting Initial			Initial value: 0
	Setting range	0.0–100%	Unit	0.01
	Content	Select FIV as feedback v	alue	


100% setting is corresponding to analog input 10V voltage.

PID closed-loop control is widely used to control the process such as pressure and temperature.


Feedback signal is given from temperature transmitter or pressure transmitter. In case of PID control, the channel of feedback signal input is of analog signal (4–20mA or 0–10V). There are two channels available for setting.


## Block diagram of PID control:

General regulation method for PID control:

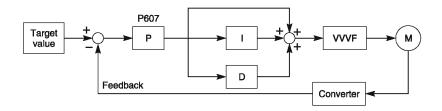


- (1)Select sensor/transmitter correctly, for which the standard signal of 4–20mA or 0–10V shall be selected as output specification.
- (2) Set PID action set point correctly.
- (3) Increase proportional constant (P), in case of non-oscillating output.
- (4) Decrease integration time (Ti), in case of non-oscillating output.
- (5) Increase differential (Td), in case of non-oscillating output.

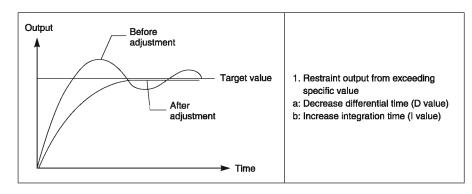

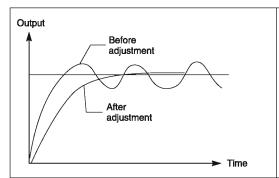

- 2. Restraint output from oscillating
- a: Decrease differential time (D value) or set it as 0
- b: Decrease the value of proportional constant (P)

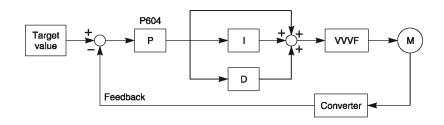

P605	PID upper limit alam	n value	Initial value:	
	Setting range	0.0–100%	Unit	0.1

Set the upper limit value. If the feedback value exceeds the setting, the alarm signal is output. The maximum input (20mA/10V) of the measured value (Terminal FIVFIC) is equivalent to 100%.

P606	PID lower limit alarm value		Initial value:	
	Setting range	0.0–100%	Unit	0.1

Set the lower limit value. If the feedback value falls below the setting range, the alarm signal is output. The maximum input (20mA/10V) of the measured value (Terminal FIVFIC) is equivalent to 100%.

P607	PID proportional ban	pand Initial v		value: 100%
	Setting range	0.0–200%	Unit	0.1

If the proportional band is narrow (parameter setting is small), the manipulated variable varies greatly with a slight change of the measured value. Hence, as the proportional band narrows, the response sensitivity (gain) improves but the stability deteriorates, e.g. hunting occurs.

P608	PID integral time		Initial value: 0.3s	
	Setting range	0.0-200.0S	Unit	0.1

For deviation step input, time(Ti) required for only the integal (I) action to provide the same manipulated variable as that for the proportional (P) action. As the integral time decreases, the set point is reached earlier but hunting occurs more easily.

P609	PID differential time	time		Initial value: 0	
	Setting range	0.0-20.0	Unit	0.01	

For deviation lamp input, time (Td) required for providing only the manipulated variable for the proportional (P) action. As the differential time increases, greater response is made to a deviation change.

P610	PID action step-length		Initial value: 0.10	
	Setting range	0.00-1.00Hz	Unit	0.01

PID is figured out once every 10ms. Frequency increment will be figured out (Δ FHz) every time. While frequency increment is more than value of P610 in maximum of frequency increment, P610 will work.

P611	PID standby frequency		Initia	l value: 0.00
	Setting range	0.00-120.00Hz	Unit	0.01
P612	PID standby duration		Initia	l value: 10.0
	Setting range	0.0–200.0	Unit	0.1
P613	PID wake-up value value: 0.0%			Initial
	Setting range	0.0–100%		

P611 PID standby frequency.

P611 must reach minimum frequency in PID standby. When running frequency is less than value of P610 standby duration will begin counting.


P612 PID standby duration.

When running duration of inverter is more than standby frequency the value (standby duration) of P612, the inverter will be standby.

Then stop output, and disconnect with PID, but monitor the feedback of P613 PID.

P613: PID wake-up value.

When the inverter detects that feedback value less than wake-up value (P613), PID function will be taken action, and then inverter will start.

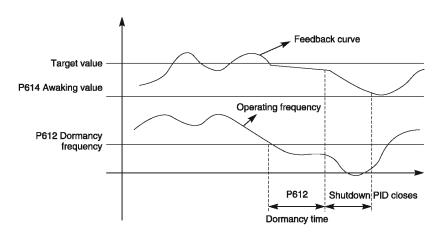

Example: PID action set point is 60% (0–100% is corresponding to 0–10V), and the wake-up value is 80%, which is actually corresponding to 0–10V, then the actual wake-up value is  $60\% \times 80\%=48\%$  (corresponding to 0–10V).

P614	PID corresponding v	alue of display	Initial	value: 100	
	Setting range	0–1000	Unit	1	
P615	PID digit of display		Ir	itial value:	
	Setting range	0–5	Unit	1	
	Content	0: Not display PID feed 1: Display 1 digit 2: Display 2 digits 3: Display 3 digits 4: Display 4 digits 5: Display 5 digits	back value		
P616	PID decimal digit of display			Initial value: 1	
	Setting range	0–4	Unit	1	
		0: Not display after decimal point 1: Display 1 digit after decimal point 2: Display 2 digits after decimal point 3: Display 3 digits after decimal point 4: Display 4 digits after decimal point			

P614 PID corresponding value of display.

P614 setting value is corresponding to + 10V analog voltage.

If P614 is set as 200, then it indicates that full span is 200, corresponding to+10V voltage.

P615 sets the digit display.

0 indicates not displaying feedback value. Users may select the digit displayed according to actual need.

P616 PID decimal digit of display.

P616 sets the digit displayed after decimal point.

For example: Four-digit display is required, with 1 digit displayed after decimal point, target value is set as 50%, and PID corresponding value of display is 200.

Then, the display value is 200 x 50%=100.0 and the parameter group is convenient for users to monitor.

Parameter: P614=200; P615=4; P616=1.

# 8-8 Initial Settings and Specifications of RS-485 Communication

Used to perform required setting for communication between the inverter and personal computer.

P700	RS-485 Communica	nication speed		Initial value: 0	
	Setting range	0–3	Unit	1	
	Content	0: 4800bps 1: 9600bps 2: 19200bps 3: 38400bps			

For example, the communication speed is 19200bps when the setting value is "2".

P701	Communication mode		Initial value:	
	Setting range	0–5	Unit	ব
		0: 8N1 For ASCII		
		1: 8O1 For ASCII		
	Content	2: 8E1 For ASCII		
	Content	3: 8N1 For RTU		
		4: 8O1 For RTU		
		5: 8E1 For RTU		

P701 sets the format of communication data. Please see related communication specification in detail.

P702	RS-485 communica	tion station	Ir	itial value: 0
	Setting range	0–240	Unit	1

Each inverter must have a station number, which will be defined through P702. Communication control of inverter can connect with 240 others.

If P702 is set to "0". means communication function is invalid.

# IST210A/IST220 series MODBUS communication protocol

IST210A/IST220 series communication agreement is with MODBUS ASCII (American standard code for information inter change) mode: Each byte consists of 2 ASCII characters, for example: The expression of the numerical value of 54Hex ASCII is that "54" consists of "5" (35Hex) and 4(34 Hex).

### 1. Definition of coding


Communication agreement belongs to hexadecimal system, of which each character represents the following information.

Character	"0"	"1"	"2"	<b>"</b> 3"	"4"	"5"	"6"	"7"
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H
Character	"8"	"9"	"A"	"B"	"C"	"D"	"E"	•F°
ASCII code	38A	39H	41H	42H	43A	44A	45H	46H

#### 2. Character structure


10-Bit character box (For ASCII)

Data pattern: 8N1 For ASCII

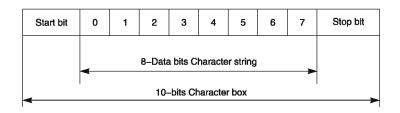


# 10-Bit character box (For RTU)


Data pattern: 8N1 For RTU

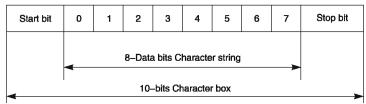


# Data pattern: 8O1 For ASCII

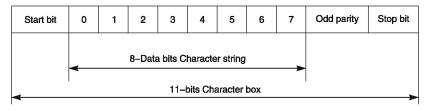


## Data pattern: 8E1 For ASCII

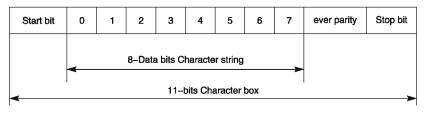

# Data pattern: 8O1 For RTU

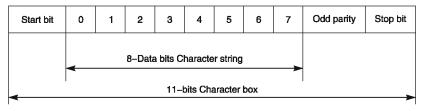

## Data pattern: 8E1 For RTU

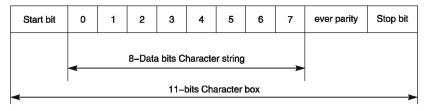

#### 3. Structure of communication data

Data format box

ASCII mode:

Start character= ':' (3AH)
Communication address
8-bit address consists of 2 ASCII codes
Function code:
8-bit function code consists of 2 ASCII codes
Data characters:
n x 8-bit data content consists of 2n ASCII codes
n≤16, with the maximum of 32 ASCII codes
LRC Check:
8-bit LRC Check consists of 2 ASCII codes
End character:
END Hi=CR (0DH), END Lo=LF (0AH)

### RTU mode:

START	Keep that zero-input signal is more than or equal to 10ms
Address	Communication address: 8-bit binary address
Function	Function code: 8-bit binary address
DATA (n-1)	
	Data characters: n × 8-bit data, n=16
DATA 0	
CRC CHK Low	CRC Check:
CRC CHK High	16-bit CRC Check consists of 28-bit binary systems
END	Keep that zero-input signal is more than or equal to 10ms

### Communication Address

00H: All driver Broadcasts

01 H: For inverter with 01 st address

0FH: For inverter with 15th address

10H: For inverter with 16th address, by analogy, the maximum could reach 240.

Function code and Data Characters

03H: Read out the content of temporary storage

06H: Write a WORD into temporary storage; Function code 03H:

Read out the content of temporary storage.

For example: Driver address 01H, reads out the data characters in 2 successive temporary storages as follows: Initial temporary storage address 2102H

Function code 06H: Write a WORD into temporary storage.

Format of enquiry message character string:

STX	텧
Address	'1'
Address	'0'
Function	'0'
Function	'3'
	'2'
Starting address	'1'
Starting address	'0'
	'2'
	'0'
Number of data	'0'
(count by word)	'0'
	'2'
LDC Obselv	'D'
LRC Check	<b>'7'</b>
END	CR
END	LF

STX	7
Address	'1'
Address	'0'
Function	'0'
Function	'3'
Number of data	'0'
(count by word)	'4'
	'1'
Content of starting	'7'
address 2102H	'7'
	'0'
	'0'
Content of address	'0'
2103 H	'0'
	'0'
L DO Observe	'7'
LRC Check	'1'
END	CR
END	LF

## ASCII mode:

RTU mode:

Format of enquiry message:

01H
03H
21H
02H
00H
02H
6FH
F7H

### Format of response message:

Address	01H
Function	03H
Number of data (count by word)	04H
Content of data	17H
address 8102H	70H
Content of data	00H
address 8103H	оон
CRC CHK Low	FEH
CRC CHK High	5CH

For example: Driver address 01H, writes 6000 (1770H) into the internal setting parameter 0100H of driver. LRC Check of ASCII mode:

## ASCII mode:

Format of enquiry message	character string:	Format of response messag	e character string:
STX	÷	STX	÷
Address	'0'	Address	'0'
Address	'1'	Addless	'1'
Function	'0'	Function	'0'
runction	'6'	T dilcuoit	'6'
	'0'		'0'
Data address	'1'	Data address	'1'
Data address	'0'	Data address	'0'
	'0'		,0,
	'1'		'1'
Data content	'7'	Data content	'7'
Data Content	'7'	Data content	'7'
	'0'		'0'
LRC Check	'7'	LRC Check	'7'
LI IO OTIGER	'1'	LITO OTIGER	'1'
END	CR	END	CR
LIAD	LF	LIND	LF

## RTU mode:

Format of enquiry message:		Format of response message	<b>)</b> :
Address	01H	Address	01H
Function	06H	Function	06H
Data address	01H	Data address	01H
Data address	00H	Data address	00H
Data content	17H	Data content	17H
Data content	70H	Data content	70H
CRC CHK Low	86H	CRC CHK Low	86H
CRC CHK High	22H	CRC CHK High	<b>22</b> H

LRC Check is the value added from Address to Data Content. For example, the LRC Check of the above 3.3.1 enquiry message is as: 01H+03H+21H+02H+00H+02H=29H, then the complement of 2 (D7H) is taken.

CRC Check of RTU mode CRC Check is from Address to Data content, and its running rule is as follows:

Step 1:Make 16-bit temporary storage (CRC temporary storage)=FFFFH.

Step 2: Exclusive OR first 8-bit byte message instruction and low 16-bit CRC temporary storage: Perform Exclusive OR, and store the result into CRC temporary storage.

Step 3: Move CRC temporary storage one more bit, and fill 0 into high bit position.

Step 4: Check right shift value, if being 0, store the new value for step 3 into CRC temporary storage, otherwise in case of Exclusive OR A001H and CRC temporary storage, store the result into CRC temporary. Step 5: Repeat Step 3 ~ Step 4, and operate completely for 8-bit.

Step 6: Repeat Step 2 ~ Step 5, and take the message instruction for next 8-bit, till all message instructions are operated completely.

Finally, the value gotten of CRC temporary storage is CRC Check. It is noteworthy that, CRC Check must be placed into the check mode of message instruction interchangeably.

The following is the example of CRC Check running written in C language:

Unsigned char \* data ←//Message instruction pointer

Unsigned char length ←//Length of message instruction

# 8-9 Advanced Application Parameters

P800	Advanced application parameter lock			Initial value: 1	
	Setting range	0–1	Unit	1	
	content	0: Lock 1: Unlock			

If P800 is set to "0", you can not use the advanced parameters.

			itial value: (
Setting range	0–1	Unit	্ৰ
content	0: 50Hz		
	Setting range content	0: 50Hz	content 0: 50Hz

50Hz/60Hz system could be set via the parameter according the condition of electric network.

P802	Constant and variable torque selection		lı	Initial value: 0	
	Setting range	0–1	Unit	1	
	content	0: Constant torque 1: Variable torque			

For fan and pump load, you can select "variable torque" for better energy saving.

P803	Overvoltage protect	tion setting Initial v		value: change	
	Setting range	760–820	Unit	1	

P803 sets DC-bus overvoltage protection level. This function could be used to avoid over voltage protection during deceleration.

P804	Undervoltage protection setting		Initial va	Initial value: change	
	Setting range	380–450	Unit	1	

P804 sets voltage protection level.

If the input voltage is low, inverter is easy to trip for undervoltage.

This function could be used to avoid inverter protection undervoltage

P805	Over temperature protection setting		Initial value: change	
	Setting range	40-120	Unit	-1

P805 sets the over temperature protection level of inverter. In high temperature environment, the protection level could be improved appropriately, to guarantee the normal running of inverter. However, too high setting value will result in IGBT damage, so the only solution is to improve the effect of heat elimination, so as to achieve the goal of cooling—down.

P806	Current display filter time		Initial value: 2.0	
	Setting range	0–100	Unit	1

This parameter setting is relevant to the stabilization of current display, and shall not be modified in general. If the setting is too small, current display will fluctuate.

P807	0-10V analogue output low end calibration coefficient Initial value			nitial value: *
	Setting range	0-65535	Unit	1
P808	0-10V analog output high end calibration coefficient Initial value: *			
	Setting range	0-65535	Unit	1
P809	0–20mA analogue output low end calibration coefficient Initial value: *			
	Setting range	0-65535	Unit	1
P810	0-20mA analog outp	out high end calibration coefficie	ent li	nitial value: '
	Setting range	0-65535	Unit	1

**Detailed Explanations of Functional Parameters** 

The above parameters are factory default setting, normally shall not be adjusted, otherwise it may cause abnormal operation.

# **Chapter 9 Precautions for Maintenance and Inspection**

The inverter is a static unit mainly consisting of semiconductor devices. Daily inspection must be performed to prevent any fault from occurring due to the adverse effects of the operating environment.

Such as temperature, humidity, dust, dirt and vibration, changes in the parts with time, service life, and other

· Precautions for maintenance and inspection

For some short time after the power is switched off, a high voltage remains in the somoothing capacitor. When accessing the inverter for inspection, wait for at least 10 minutes after the power supply has been switched off, and then make sure that the voltage across the main circuit terminals P/+--N/- of the inverter is not more than 30VDC using a tester, etc.

# 9-1 Inspection

## 9-1-1 Daily inspection

Basically, check for the following faults during operation.

- (1) Motor operation fault
- (2) Improper installation environment
- (3) Cooling system fault
- (4) Unusual vibration and noise
- (5) Unusual overheat and discoloration

During operation, check the inverter input voltages using a tester.

## 9-1-2 Periodic inspection

Check the areas inaccessible during operation and requiring periodic inspection.

Consult us for periodic inspection.

- (1) Check for cooling system fault ..... Clean the air filter, etc.
- (2) Tightening check and retightening ..... The screws and bolts may become loose due to vibration, temperature changes, etc.
- (3) Check the conductors and insulating materials for corrosion and damage.
- (4) Measure insulation resisitance.
- (5) Check and change the cooling fan and rely.

## 9-1-3 Daily and Periodic Inspection

Inspection item	Description	Corrective Action at Alarm Occurrence
Surrounding environment	Check the ambient temperature, humidity, dirt, corrosive gas, oil mist. etc.	Improve environment
Overall unit	Check for unususal vibration and noise	Check alarm location and retighten
Power supply voltage	Check that the main circuit voltages and control voltages are normal.	Inspect the power supply
General	Check with megger (across main circuit terminals and earth terminal)     check for loose screws and bolts     check for overheat traces on the parts     check for stain	Cnotact thr manufacturer Retighten Contact the manufacturer Clean

Inspection item	Description	Corrective Action at Alarm Occurrence
Aluminum electrolytic capacitor	Check for liquid leakage in a capacitor and deformation trance     Visual check and judge by the life check of the control circuit capacitor.	Contact the manufacturer
Cooling system	Air filter, fan, etc.	Clean
Load motor	Check for vbration and abnormal increase in operation noise	Stop the device and contact the manufacturer

Precautions for Maintenance and Inspection

# 9-2 Replacement of Parts

The inverter consists of many electronic parts such as semiconductor devices.

The following parts may deteriorate with age because of their structures or physical characteristics leading to reduced performance or fault of the inverter. For preventive maintenance, the parts must be replaced periodically.

Use the life check function as a guidance of parts replacement.

Part name	Standard replacement interval	Description
Cooling fan	3-5 years	Replace (as required)
Smoothing capacitor	5 years	Replace (as required)
Fuse (18.5kw or more)	10 years	Replace (as required)
Relays		as required

Replacement years for when the yearly average ambient temperature is 40°C (Without corrosive gas, flammable gas, oil mist, dust and dirt etc.)

# 9-3 Trouble Shooting

When an alarm (major failures)occurs in the inverter, the protective function is activated bringing the inverter to an alarm stop and the operation panel dispay automatically changes to any of the following error (alarm) indications.

If your fault does not correspond to any of the following errors or if you have any other problem, please contact your sales representative.

- Alarm display ····· when the protective function is activated, the operation panel display automatically switches to the above indication.
- · Resetting method ······ when the protective function is activated, the inverter output is kept stopped. Unless reset, therefore, the inverter cannot restart.
- · When the protective function is activated, take the corresponding corrective action, then reset the inverter, and resume operation.

and resume operation.

Not doing so may lead to the inverter fault and damage.

List of alarm displa	y		
Operation Panel Indication	Name	Possible fault reason	Corrective action
OC0/UC0	Over current during stop	1: Inverter fault	Please contact your sales representative.
OC1/UC1	Over current during acceleration	1: Acceleration time is too short 2: V/F curve is not set correctly 3: Motor or motor wire have short circuit to the ground 4: The torque boost is set too fast 5: The input voltage is too low 6: Directly start up the running motor 7: The inverter setting is not correct 9: The inverter fails	1: Increase acceleration time 2: Correctly set V/F curve. 3: Check the insulation of motor and motor wire. 4: Reduce the value of torque boost. 5: Check input voltage 6: Check the load 7: Set tracing startup 8: Enlarge capacity of inverter 9: Sent for repairing
OC2/UC2	Over current during deceleration	Decelerate time is too short     Inverter capacity is     inappropriately set     Whether there is any     disturbing	Increase deceleration time     Enlarge inverter capacity     Solve disturbing resource
oc3/uc3	Over current during constant speed	1: The insulation of motor and motor wire is not good 2: Load fluctuation 3: Fluctuation of input voltage and the voltage is low 4: Inverter capacity is inappropriately set 5: Whether there is a large power motor starting up and leads the input voltage goes down 6: Whether there is a disturbing resource to disturb inverter	1: Check the insulation of motor and motor wire 2: Check load situation and mechanical lubrication 3: Check input voltage 4: Enlarge the capacity of inverter 5: Increase capacity of transformer 6: Solve disturbing resource
OUO	Over voltage during stop	1: The deceleration time is short 2: Inverter capacity incorrectly set 3: Disturbing	Check the power supply voltage     Sent for repairing
OU1	Over voltage during acceleration	1: Abnormal power supply 2: Peripheral circuitry is incorrectly set (switch control on or off, etc.) 3: Inverter fault	1: Check the power supply voltage 2: Do not use power supply switch to control the inverter on or off 3: Sent for repairing

Precautions for Maintenance and Inspection

Operation Panel Indication	Name	Possible fault reason	Corrective action
OU2	Over voltage during deceleration	Power supply voltage abnormal     Energy feedback load     Braking resistor incorrectly set	1: Check the power supply voltage 2: Install braking unit and resistance 3: Affirm resistance setting again
OU3	Over voltage during constant speed	1: Decelerate time is too short 2: Power supply voltage abnormal 3: Over load 4: Braking resistor incorrectly set 5: Braking parameter is incorrectly set	1: Increase deceleration time 2: Check the power supply voltage 3: Check braking unit and resistance 4: Set Braking resistor over again 5: Correctly set parameter, e.g. braking tube voltage, etc.
LUO	Under voltage during stop	Power supply voltage abnormal     Phase missing	1: Check the power supply voltage 2: Check power supply and switch whether there is phase missing
LU1	Under voltage during acceleration		
LU2	Under voltage during deceleration	Power supply voltage abnormal     Phase missing     There is large load power start up in the input	Check whether peripheral setting bad connection leads phase missing     Please use independent power supply
LU3	Under voltage during constant speed		
Fb0			
Fb1	Fuse broken	1: The inverter fault	Please contact your sales
Fb2		i. The inverter lault	representative
Fb3			

Operation Panel Indication	Name	Possible fault reason	Corrective action	
OL0 during stop		Overload     Acceleration time is too     short	1: Reduce the load weight or replace larger capacity	
OL1 during acceleration	Iddd	3: Torque boost is too fast 4: V/F curve incorrectly set	inverter. 2: Increase acceleration time 3: Reduce torque boost rate 4: Set V/F curve over again 5: Check input voltage, increase inverter capacity	
OL2 during deceleration	Inverter overload	5: Under voltage of input 6: Before motor stops, inverter starts up		
OL3 during constant speed		7: Fluctuation or blocking in loading	Adopt tracing startup mode     Check load condition	
OT0 during stop		The motor for use under overload	Reduce the load weight.     Increase acceleration time	
OT1 during acceleration	Material	2: Acceleration time is too short 3: Motor protection setting is too small 4: V/F curve is incorrectly set 5: Torque boost is too fast	3: Increase protection setting 4: Correctly set V/F curve 5: Reduce torque boost rate 6: Check motor insulation and replace motor 7: Use larger inverter or motor	
OT2 during deceleration	Motor overload			
OT3 during constant speed		6: Bad motor insulation 7: Motor setting is too small		
OH0 during stop		1: Cooling fan broken 2: Heatsink clogging 3: The ambient temperature is high		
OH1 during acceleration	Inverter overheat		Replace the cooling fan.     Clean thr heatsink     Set the ambient temperature to within the specifications.	
OH2 during deceleration	inverter overneat			
OH3 during constant speed				
ES	Emergency stop	1: Inverter is in Emergency stop condition	After release     Emergency stop, start up as     regular procedure	
со	Communication error	1: Communication line connection has problem     2: Communication parameter is incorrectly set     3: Transmission format is wrong	1: Perform wiring of the RS-485 terminals properly. 2: Set parameter over again 3: Check data transmission format	
20	4–20mA wire broken	Terminal is loose; signal input line is bad connected	Perform wiring of the     4–20mA terminals properly	
Pr	Parameter write error	Parameter setting is wrong	After stopping operation, make parameter setting.	
Err	Wrong parameter group	The parameter does not exist or the factory setting parameter	Quit this parameter	

# 9-4 Check First When You Have Troubles

If the causes is still unknown after every check, it is recommended to initialize the parameters (initial value) then reset the required parameter values and check again.

(1) Parameter write cannot be performed

Causes and corrective actions:

- a: Check P118 parameter write selection.
- b: Check P101 Frequency setting/P102 Operation mode setting selection.
- c: Make sure that operation is not being performed. Please stop the inverter and set.
- (2) Motor does not rotate as commanded

Causes and corrective actions:

- a: Check that the P102 Operation mode selection setting is correct.
- b: Check that the starting frequency setting is not greater than the running frequency.
- c: Check the main circuit and control circuit.
- d: Check that the output stop signal or reset signal is not on.
- e: Check that P104 Reverse rotation prevention selection is not selected.
- f: Check that frequency setting of each running frequency (such as multi-speed operation) are not zero.
- g: Check that especially the P105 Maximum frequency setting in not zero.
- h: Check that the P400 Jog frequency setting is not lower than the P202 starting frequency setting.
- i: Check that the load is not too heavy.
- (3) Motor generates heat abnormally

Causes and corrective actions:

- a: Check that the load is not too heavy. Lighten the load.
- b: Is the fan for the motor is running?(check for accumulated dust.)
- c: Check that the P208 Torque boost setting is correct.
- d: Was the motor type set? Check the setting of P209 to P219 applied motor.
- e: When using any other manufacturer s motor ,perform offline auto tuning.
- (4) Motor generates abnormal noise

Causes and corrective actions:

a: No carrier frequency noises (metallic noises) are generated.

Check the setting of P115 applied motor.

- b: Check for any mechanical looseness.
- c: Contact the motor manufacturer.
- (5) Motor rotates in opposite direction

Causes and corrective actions:

- a: Check that the phase sequence of output terminals U,V and W is correct.
- b: Check that the start signals (forward rotation, reverse rotation) are connected properly.
- (6) Speed does not increase

Causes and corrective actions:

- a: Check that the maximum frequency (P105)setting is correct. (If you want to run the motor at 120Hz or more, set P105 High speed maximum frequency.)
  - b: Check that the load is not too heavy. (In agitators, etc, load may become heavier in winter.)
  - c: Check that the brake resistor is not connected to terminals P/+--p/-accidentally.
- (7) Inverter may interfere with other devices.

Causes and corrective actions:

The input/output (main circuit) of the inverter includes high frequency components, which may interfere with the communication devices used near the inverter. In this case ,set EMC filter valid to minimize interference.

- a: Decrease carrier frequency (P115).
- b: Install a noise filter on the inverter output side to reduce the electromagnetic nois generated from the inverter.
  - c: Install a noise filter on the inverter input side.
- d: For reduction of induction noise from the power line of the inverter, it is recommended to wire the earth cable by returning it to the earth terminal of the inverter.
- e: To prevent a malfunction due to noise, keep the signal cables more than 10cm away from the power cables.
  - f: Control circuit cable should use shielded cable, and the cable should be installed in metal tube


# 9-5 Inverter-generated Noises and Their Reduction Techniques

Some noises enter the inverter to malfunction it and others are radiated by the inverter to malfunction peripheral devices. Though the inverter is designed to be insusceptible to noises, it handles low-level signals, so it requires the fillowing basic techniques. Also, since the inverter chops outputs at high carrier frequency, that could generate noises. If these noises cause peripheral devices to malfunction, measures should be taken to suppress noises. These techniques differ slightly depending on noise propagation paths.

- Basic techniques
- Do not run the power cables (I/O cables) and signal cables of the inverter in parallel with each other and do not bundle them.
- Use twisted pair shielded cables for the detector connection and control signal cables, and connect the sheathes of the shield cables to terminal SC.
- · Earth the inverter, motor, etc, at one point.
- 2 Techniques to reduce noises that enter and malfunction the inverter

When devices that generate many noises (which use magnetic contactors, magnetic brakes, many relays, for example) are installed neat the inverter and the inverter may be malfunctioned by noises, the following measures must be taken:

- · Provide surge suppressors for devices that generate many noises to suppress noises.
- Fit data line filters to signal cables.
- · Earth the shields of the detector connection and control signal cables with Cable clamp metal.
- 3 Noise reduction examples

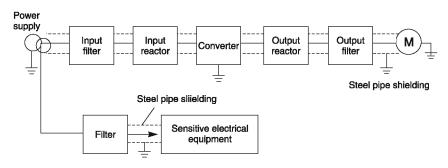

# **Chapter 10 Peripheral Devices Selection**

Check the motor capacity of the inverter you purchased. Appropriate peripheral devices must be selected according to the capacity. Refer to the following list and prepare appropriate peripheral devices:

# 10-1 Peripheral Devices Description

Peripheral Devices Name	Description
Moulded case circuit break (MCCB) or earth leakage circuit break (ELB), fuse	The breaker must be selected carefully since an In-rush curreH flows in the inverter at power on.
Magnetic coHactor (MG)	Install the MC to ensure safety.  Do not use this MC to start and stop the inverter.  Doing so will cause the inverter life to be shorten
AC/DC Reactor	Reactor (option) should be used when power harmonics measures are taken, the power factor is to be improved or thr inverter is installed near a large power supply system (1000KVA or more). The inverter may be damaged if you do not use reactors. Select the reactor according to the model. For the 160KW or less, remove the jumpers across terminals P/+—P/-to connect to the DC reactor. For the 185KW or more, a DC reactor is supplied. Please always install the reactor.
Noise filter	Install a noise filter to reduce the electromagnetic noise generated from the inverter. Effective in the rang from about 1 MHz to 10MHz. When more wires are passed throug, a more effective result can be obtained.
Brake resistor and brake unit	To improve the brake capability at deceleration.
Ferrite ring	To reduce the disturbance which is generated by inverter.

# 10-2 Applied Braking Resistor Specification

	Brake resistor		Brake Unit	Brake	Motor
Applicable Inverter Type	Power (W)	Resistance value Ω	CDBR	Torque (10% ED)	Output (kW)
IST210A-S04B	80	400	built-in	125	0.4
IST210A-S07B	80	200	built-in	125	0.75
IST210A-S15B	260	130	built-in	125	1.5
IST220S0.4G	80	400	built-in	125	0.4
IST220S0.7G	80	200	built-in	125	0.75
IST220S1.5G	260	130	built-in	125	1.5
IST220S2.2G	260	80	built-in	125	2.2

	Brake resistor		Brake Unit	Brake	Motor	
Applicable Inverter Type	Power Resistance (W) value Ω		CDBR	Torque (10% ED)	Output (kW)	
IST220S3.7G	400	48	built-in	125	3.7	
IST210A-T07B	80	750	built-in	125	0.75	
IST210A-T15B	300	400	built-in	125	1.5	
IST210A-T22B	300	150	built-in	125	2.2	
IST220T0.2G	80	750	built-in	125	0.2	
IST220T0.4G	80	750	bullt-in	125	0.4	
IST220T0.7G	80	750	built-in	125	0.75	
IST220T1.5G	300	400	built-in	125	1.5	
IST220T2.2G	300	150	built-in	125	2.2	
IST220T3.7G/5.5P	400	150	built-in	125	3.7	
IST220T5.5G	520	100	built-in	125	5.5	
IST220T7.5P	520	100	built-in	125	5.5	
IST220T7.5G/11P	1040	50	built-in	125	7.5	
IST220T11G/15P	1040	50	built-in	125	11	
IST220T15G/18.5P	1500	40	built-in	125	15	
IST220T18.5G/22P	6000	20	built-in	125	18.5	
IST220T22G/30P	6000	20	built-in	125	22	
IST220T30G/37P	10000	16	built-out	125	30	
IST220T37G	10000	16	built-out	125	37	

Calculate of Braking resistor value:

The Braking resistor value is related to the DC currency when the

$$R = \frac{U_{dc}^2 \times 100}{P_{Motor} \times M_{br}\% \times \eta_{Transducer} \times \eta_{Motor}}$$

Thereinto: U - Braking DC voltage;

P<sub>Motor</sub> — Motor power;

M<sub>br</sub>------- Braking torsion;

η<sub>мокот</sub> — Motor difficiency;

n<sub>Transducer</sub> — Transducer efficiency

inverter braking. For 380V power supply, the braking DC voltage is 800V-820V, and for 220V system, the DC voltage is 400V.

Moreover, the Braking resistor value is related to braking torque Mbr%, and to the differeH braking torque the Braking resistor values are differeH, and the calculation formula is as follow:

The braking power is related to braking torque and braking frequency. the foregoing illustration gives the braking torque as 125% and the frequency is 10%, and according to the differeH loading situations, the numbers in the illustration are for reference.


Memorandum

# **Appendix 1 Simple Application Example**

Three-wire Type Connnecton Example

A three-wire type connection is shown below

A: Basic connection illustration:

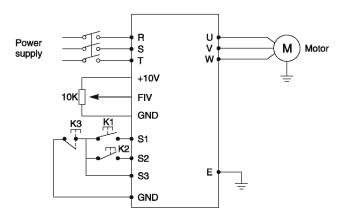

B: Parameter setting and instruction:

P101=1 Analog voltage input as frequency setting (external potentiometer)


P102=1 External terminal control

P317=6 The forward rotation start signal is assigned to the terminal S1

P318=7 The reverse rotation start signal is assigned to the terminal S2

P319=8 The stop signal is assigned to the terminal S3.

C: Action instruction:

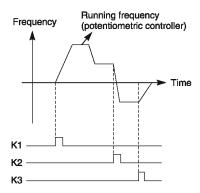

K1 forward rotation

K2 reverse rotation

K3 Stop

Output frequency is controlled by potentiometer

# **Warranty Agreement**

- The warranty period of the product is 18 months (refer to the bar code on the equipment). During the warranty period, if the product fails or is damaged under the condition of normal use by following the instructions, ISTECH will be responsible for free maintenance.
- 2. Within the warranty period, maintenance will be charged for the damages caused by the following reasons:
  - a. Improper use or repair/modification without prior permission
  - b. Earthquake, Fire, flood, abnormal voltage, other disasters and secondary disaster
  - c. Hardware damage caused by dropping or transportation after procurement
  - d. Improper operation
  - e. Trouble out of the equipment (for example, external device)
  - f. Check without tearing up the product identification (such as: Name plate)
- If there is any failure or damage to the product, please correctly fill out the Product Warranty Card in detail.
- The maintenance fee is charged according to the latest Maintenance Price List of ISTECH.
- 5. The Product Warranty Card is not re–issued. Please keep the card and present it to the maintenance personnel when asking for maintenance.
- If there is any problem during the service, contact ISTECH's agent or ISTECH directly.
- 7. This agreement shall be interpreted by Shanghai ISTECH Electric Co.. Ltd.

Shanghai ISTECH Electric Co.,Ltd.
Address: 777 Yuegong Road Jinshan Industrial zone, Shanghai, China

# **Product Warranty Card**

	Add.:				
Customer information	Name:	Contact person:			
	P.C.:	Tel.:			
	Product model:				
Product information	Body barcode (Attach here):				
	Name of agent:				
(Maintenance time and content):					
Failure information					
	Maintenance personnel:				